



- * 1 : w/ Moon Roof
- * 2 : w/ Inside Rear View Mirror Personal Light
- * 3 : w/o Inside Rear View Mirror Personal Light
- * 4 : w/o Moon Roof

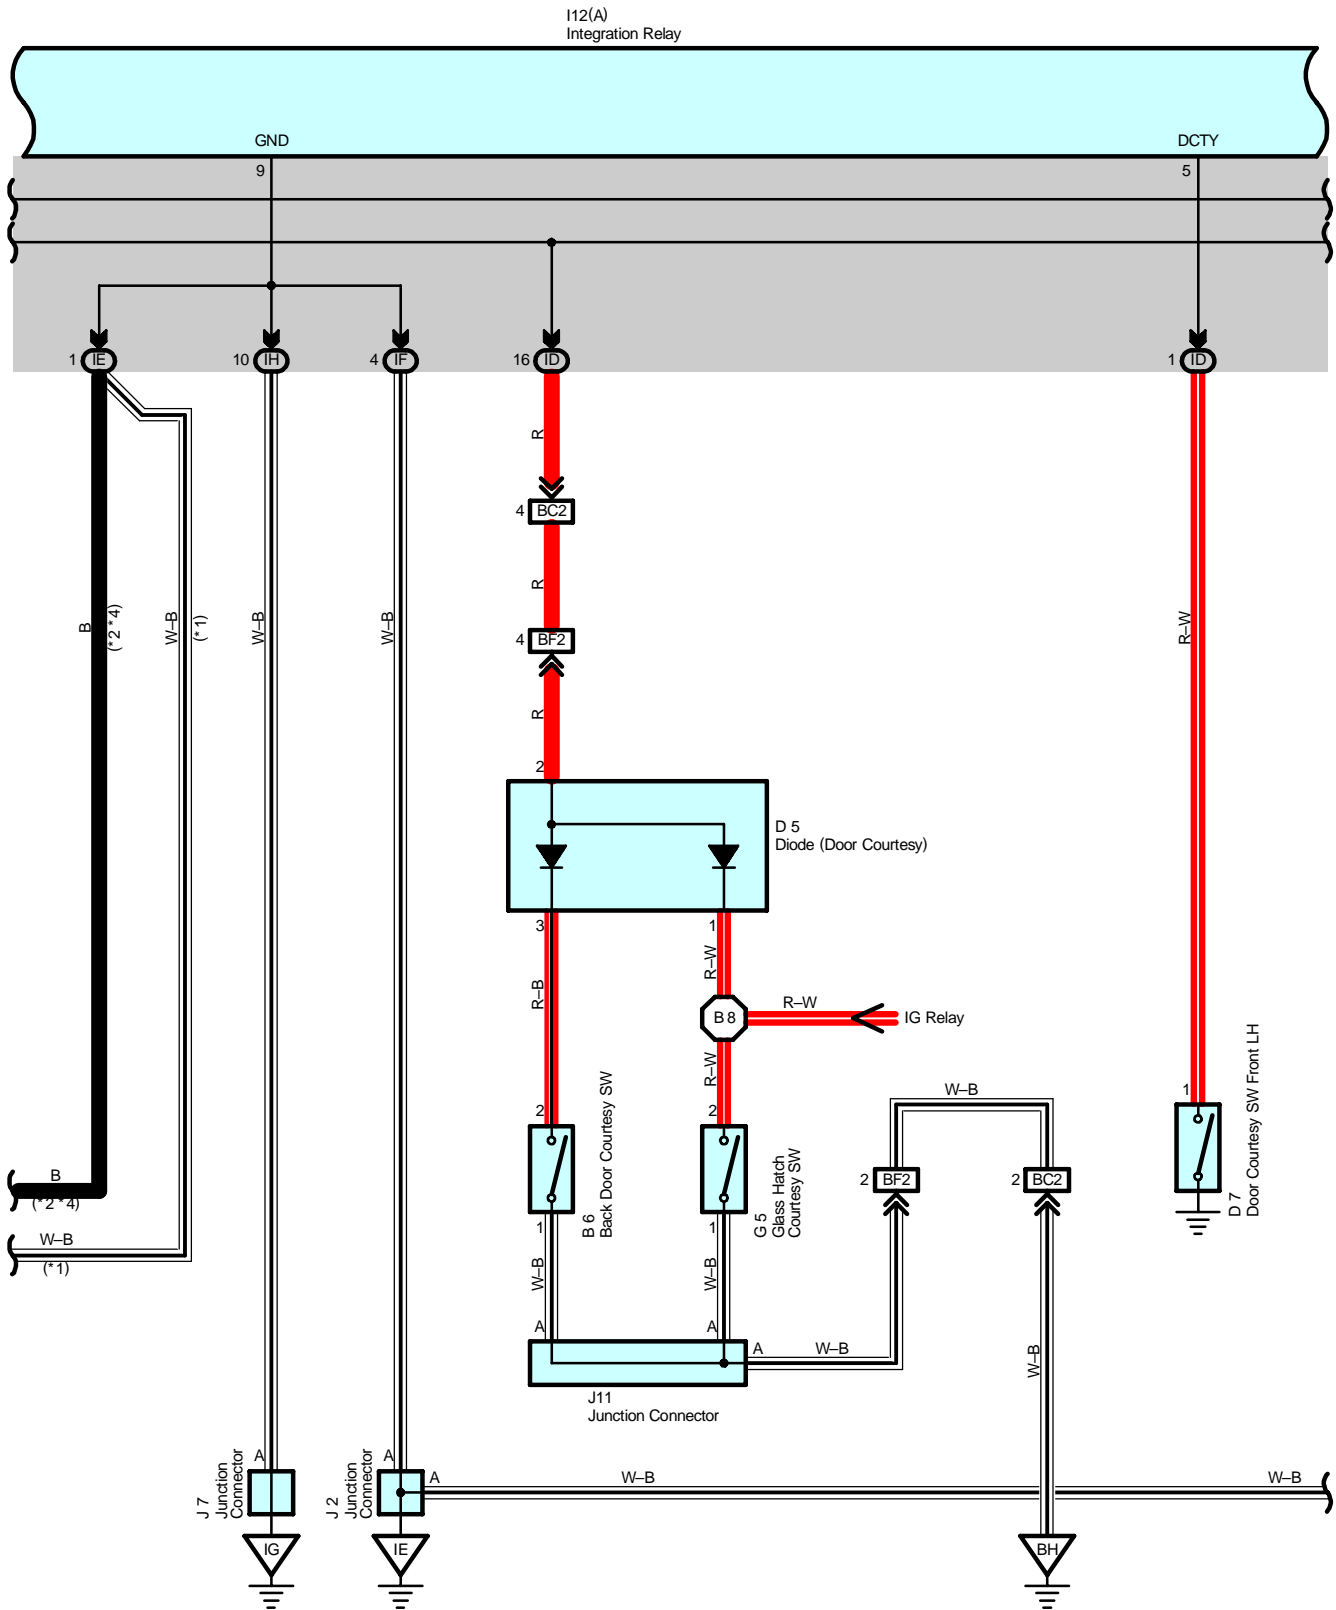

Interior Light

- * 5 : w/o Door Lock Control
- * 6 : w/ Door Lock Control

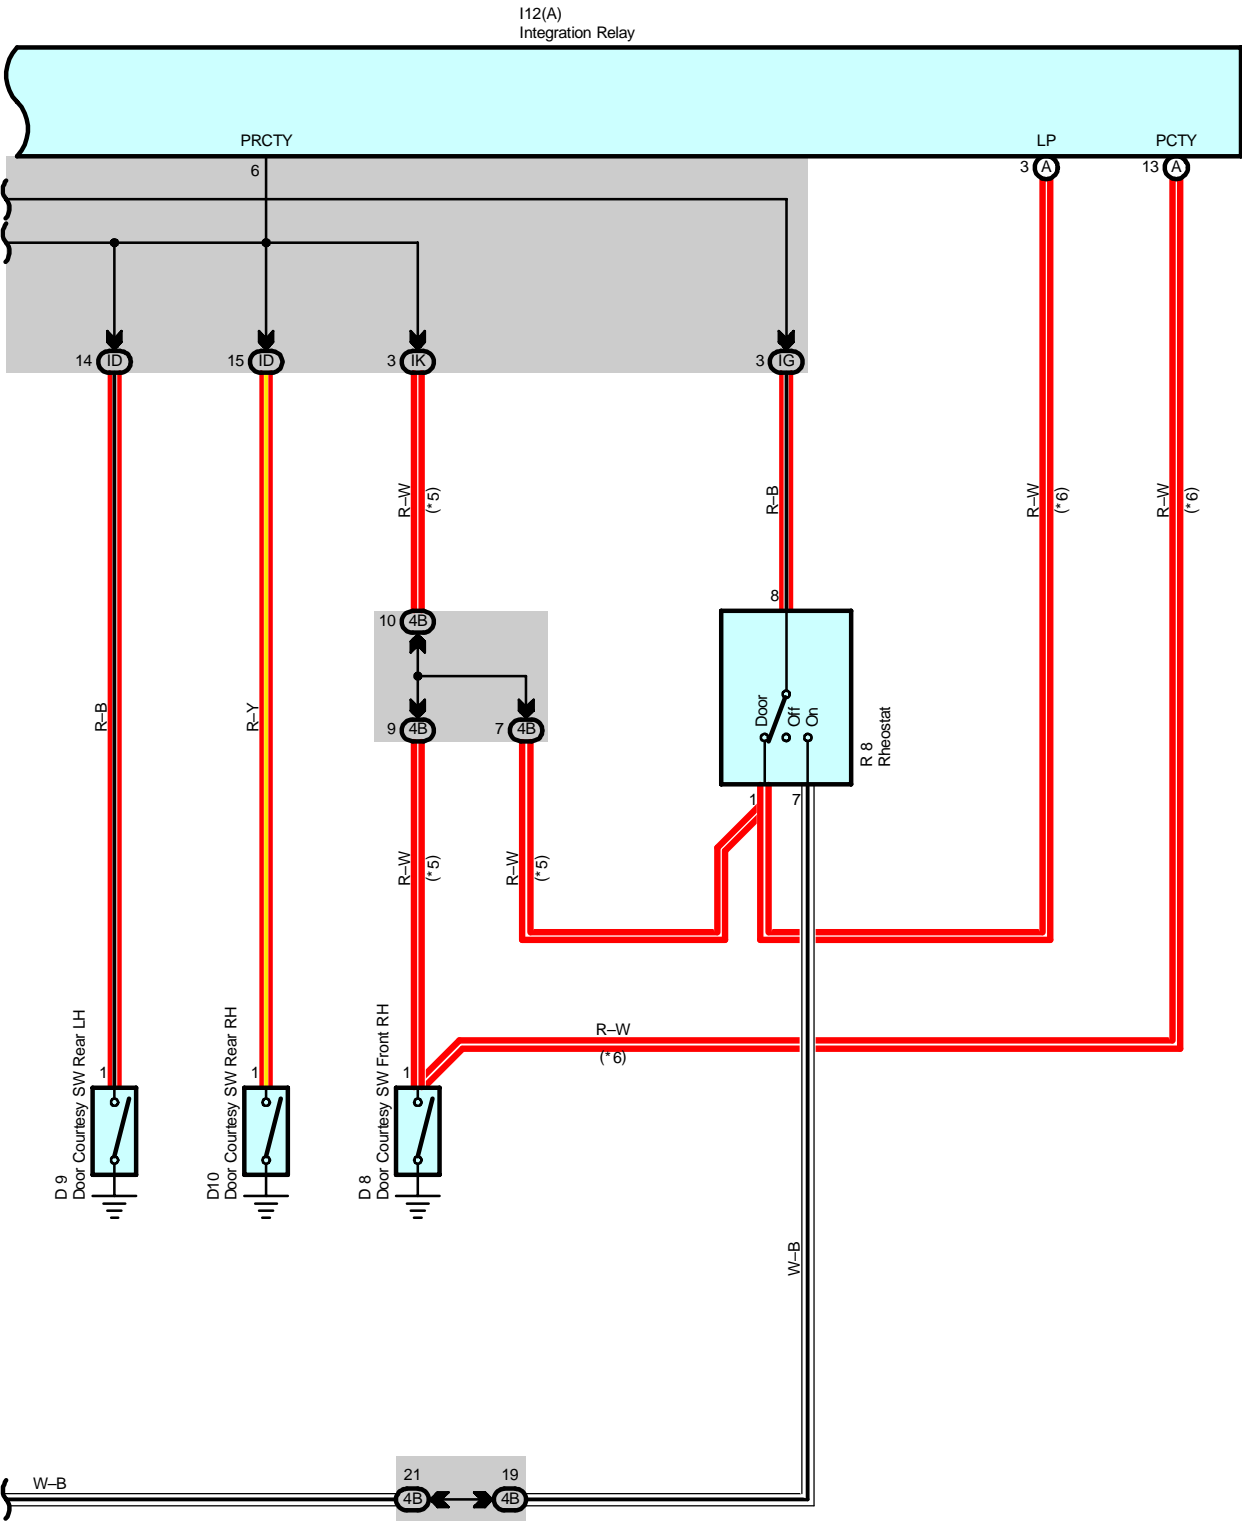

Service Hints

D7, D8, D9, D10 Door Courtesy SW Front LH, RH, Rear LH, RH

1-Ground : Closed with the door open

B6 Back Door Courtesy SW

2-1 : Closed with the back door open

G5 Glass Hatch Courtesy SW

2-1 : Closed with the glass hatch open

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B6	40	D10	40	J7	39
C11	38	G5	40	J11	40
D5	40	I12	A	L3	41
D7	40	I13	40	M3	41
D8	40	I14	40	R8	39
D9	40	J2	39		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IE	25	Roof Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IH		
IK		
IL	24	
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC2	50	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF2	50	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
IG	46	Right Kick Panel
BH	50	Left Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	50	Roof Wire	B8	50	Back Door No.2 Wire
B4					