


Horn

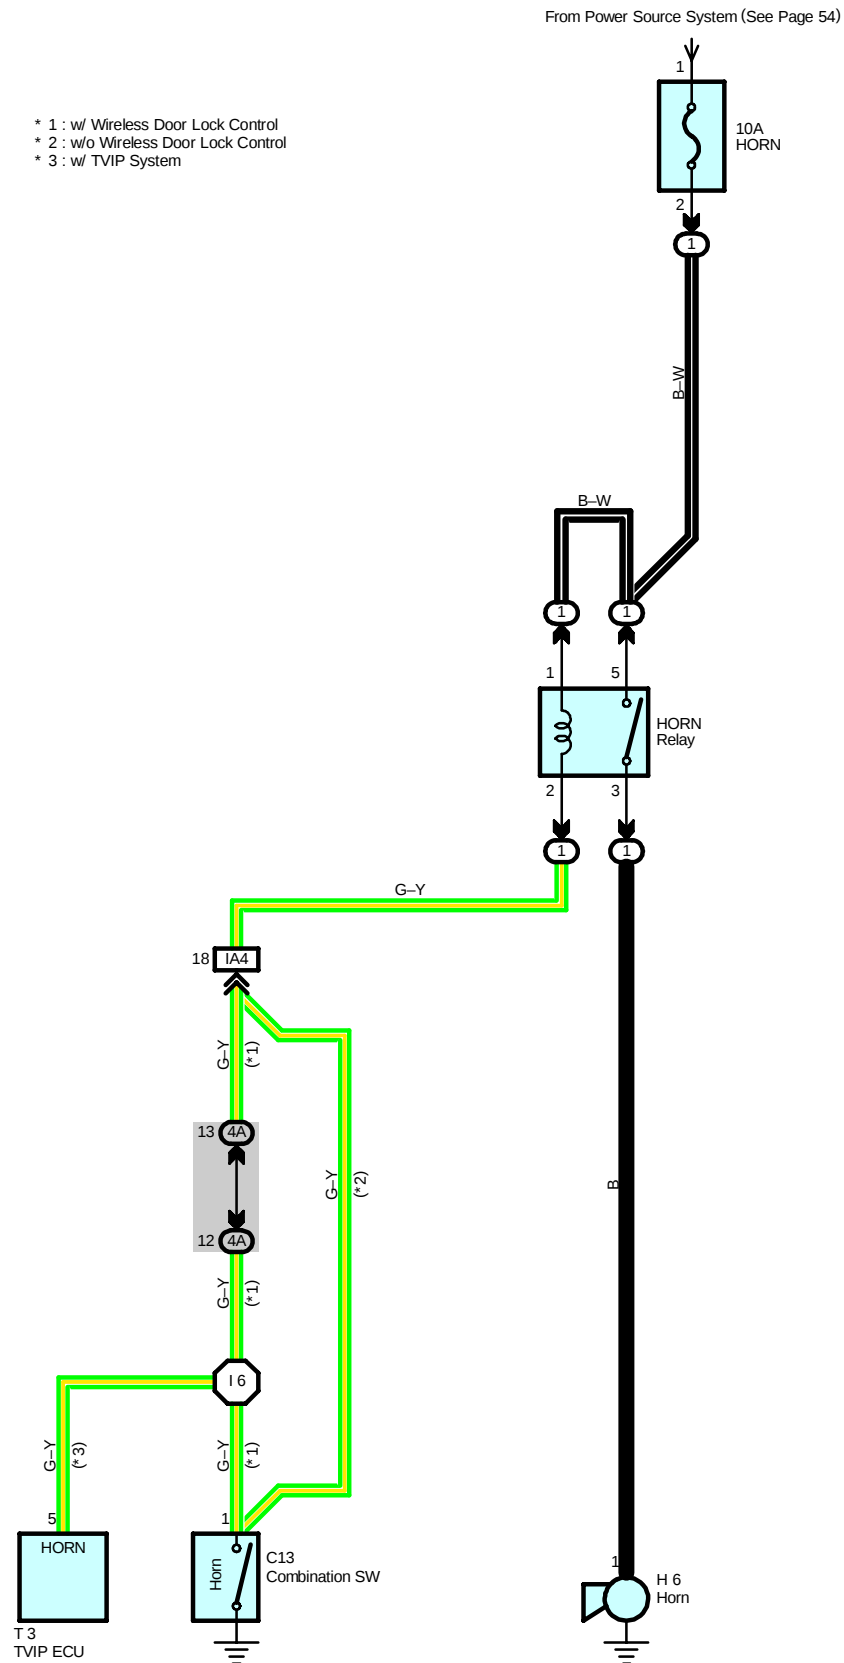

Service Hints

HORN Relay

5-3 : Closed with the horn SW on.

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C13	38	H6	36 (1ZZ-FE)		
H6	34 (2ZZ-GE)	T3	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	48	Instrument Panel Wire			