



Combination Meter

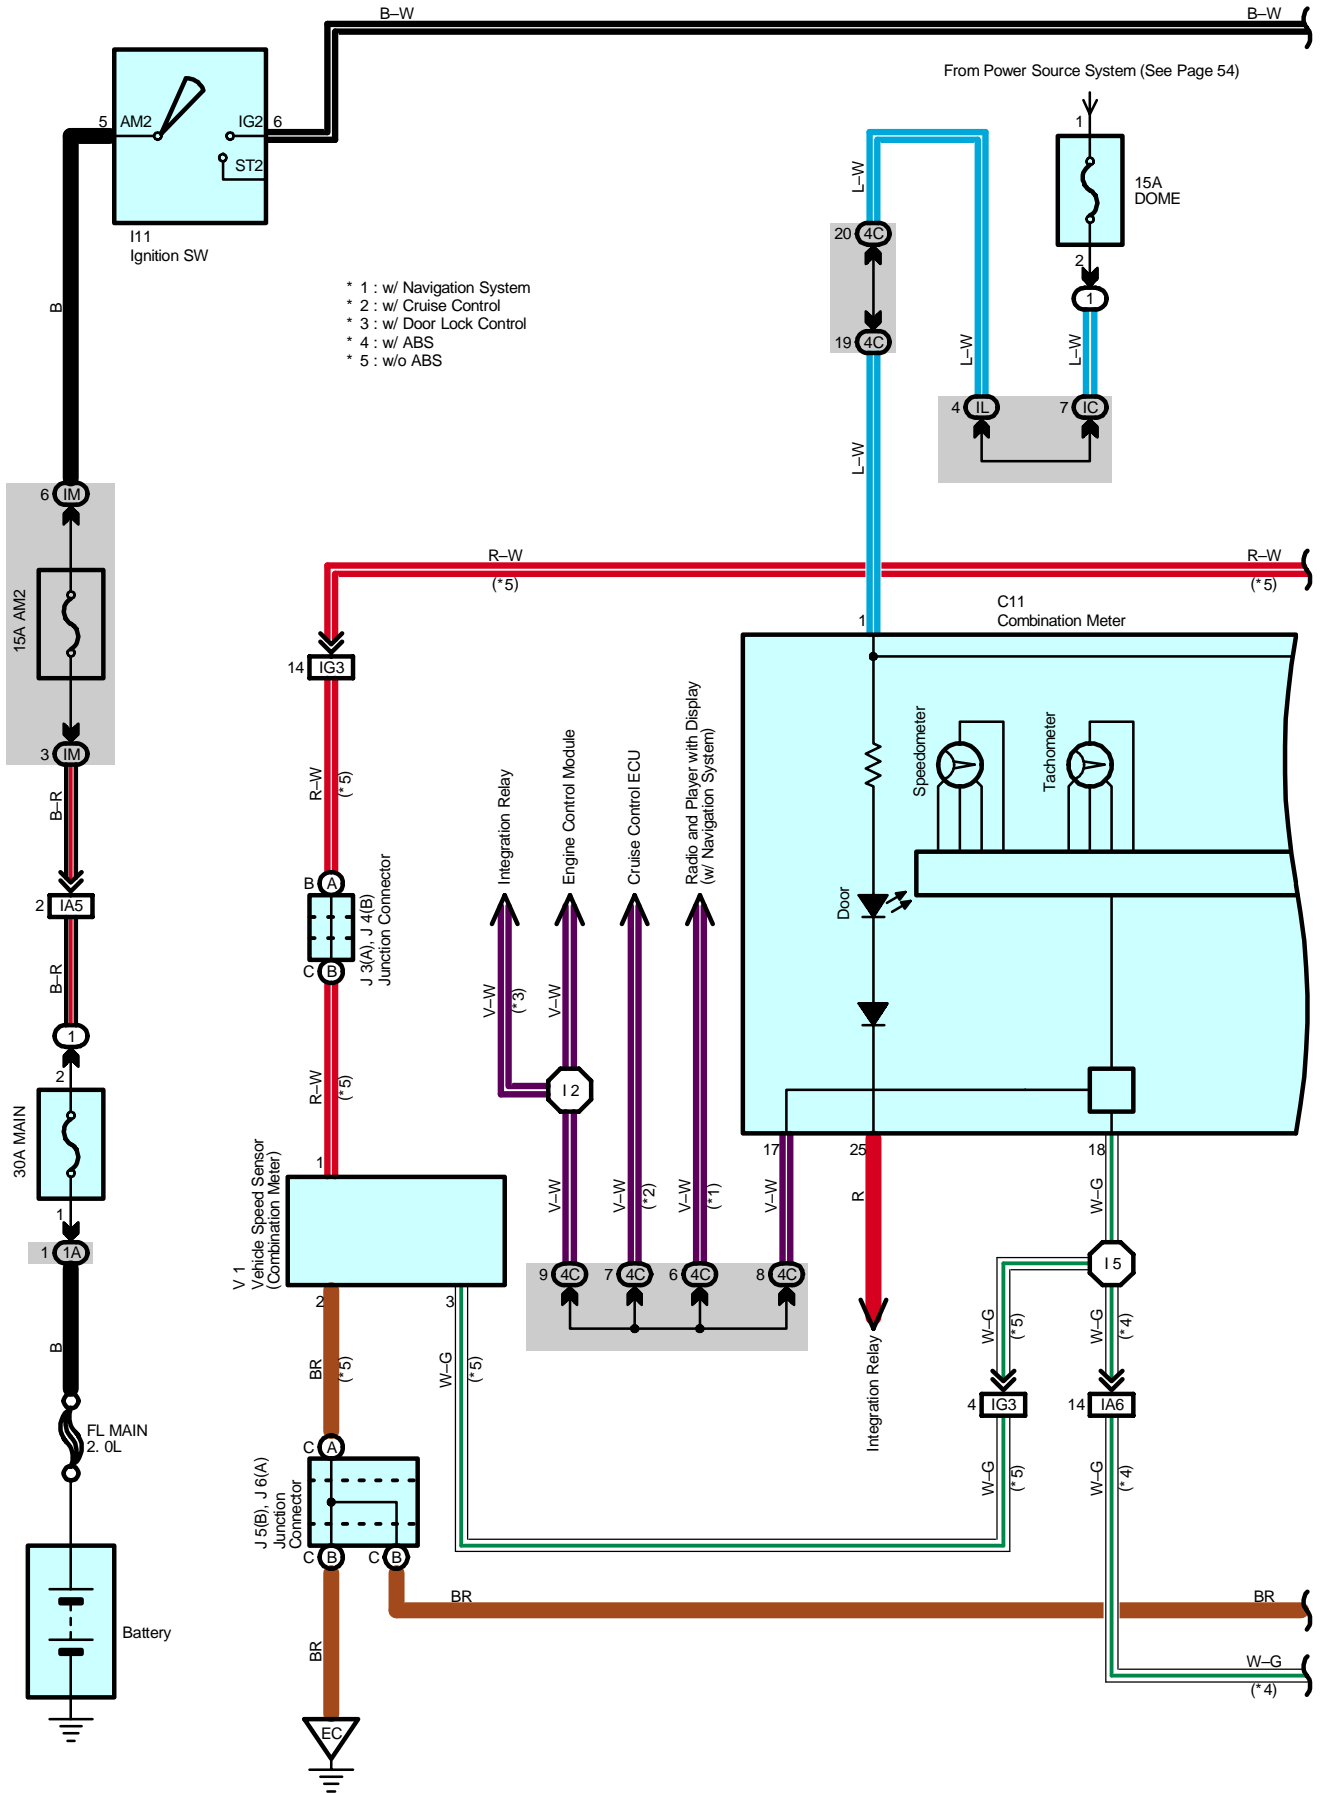

- * 2 : w/ Cruise Control
- * 4 : w/ ABS
- * 5 : w/o ABS

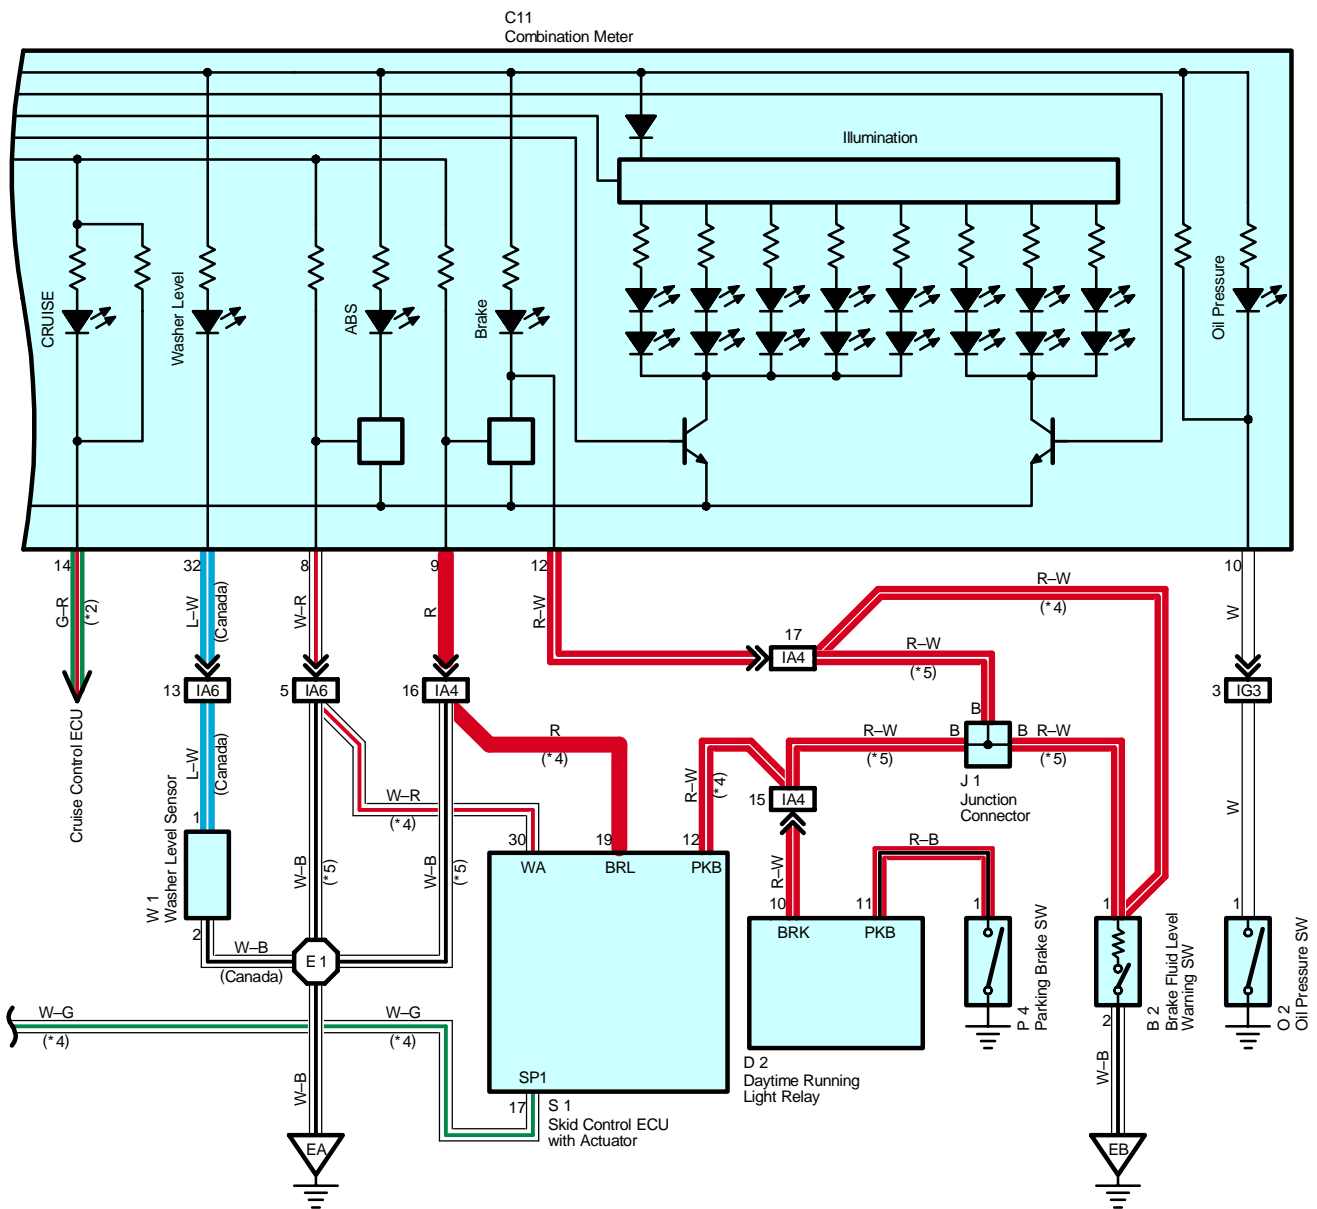

Combination Meter

Service Hints

B2 Brake Fluid Level Warning SW

1-2 : Closed with the float down

C11 Combination Meter

2, 21-Ground : Approx. 12 volts with the ignition SW at ON position

20, 34, 40-Ground : Always continuity

1-Ground : Always approx. 12 volts

O2 Oil Pressure SW

1-Ground : Opened with the oil pressure above approx. 19.61 kpa (2.84 psi, 0.2 kgf/cm²)

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
A6	34 (2ZZ-GE)	J1	35 (2ZZ-GE)	O2	37 (1ZZ-FE)	
	36 (1ZZ-FE)		37 (1ZZ-FE)	P4	39	
B2	34 (2ZZ-GE)	J2	39	S1	35 (2ZZ-GE)	
	36 (1ZZ-FE)	J3	A		39	37 (1ZZ-FE)
C11	38	J4	B	39	V1	37 (1ZZ-FE)
D2	38	J5	B	39	W1	35 (2ZZ-GE)
F10	40	J6	A	39		37 (1ZZ-FE)
I11	39	O2	35 (2ZZ-GE)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
4B	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)
4C		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		
IA6		
ID2	46	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)

**: Ground Points**

Code	See Page	Ground Points Location
EA	42 (2ZZ-GE)	Front Right Fender
	44 (1ZZ-FE)	
EB	42 (2ZZ-GE)	Front Left Suspension Tower
	44 (1ZZ-FE)	
EC	42 (2ZZ-GE)	Left Side of the Cylinder Head
	44 (1ZZ-FE)	
IE	46	Behind Combination Meter

**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	42 (2ZZ-GE)	Engine Room Main Wire	I2	48	Instrument Panel Wire
	44 (1ZZ-FE)		I5		