


# Power Outlet (115V)

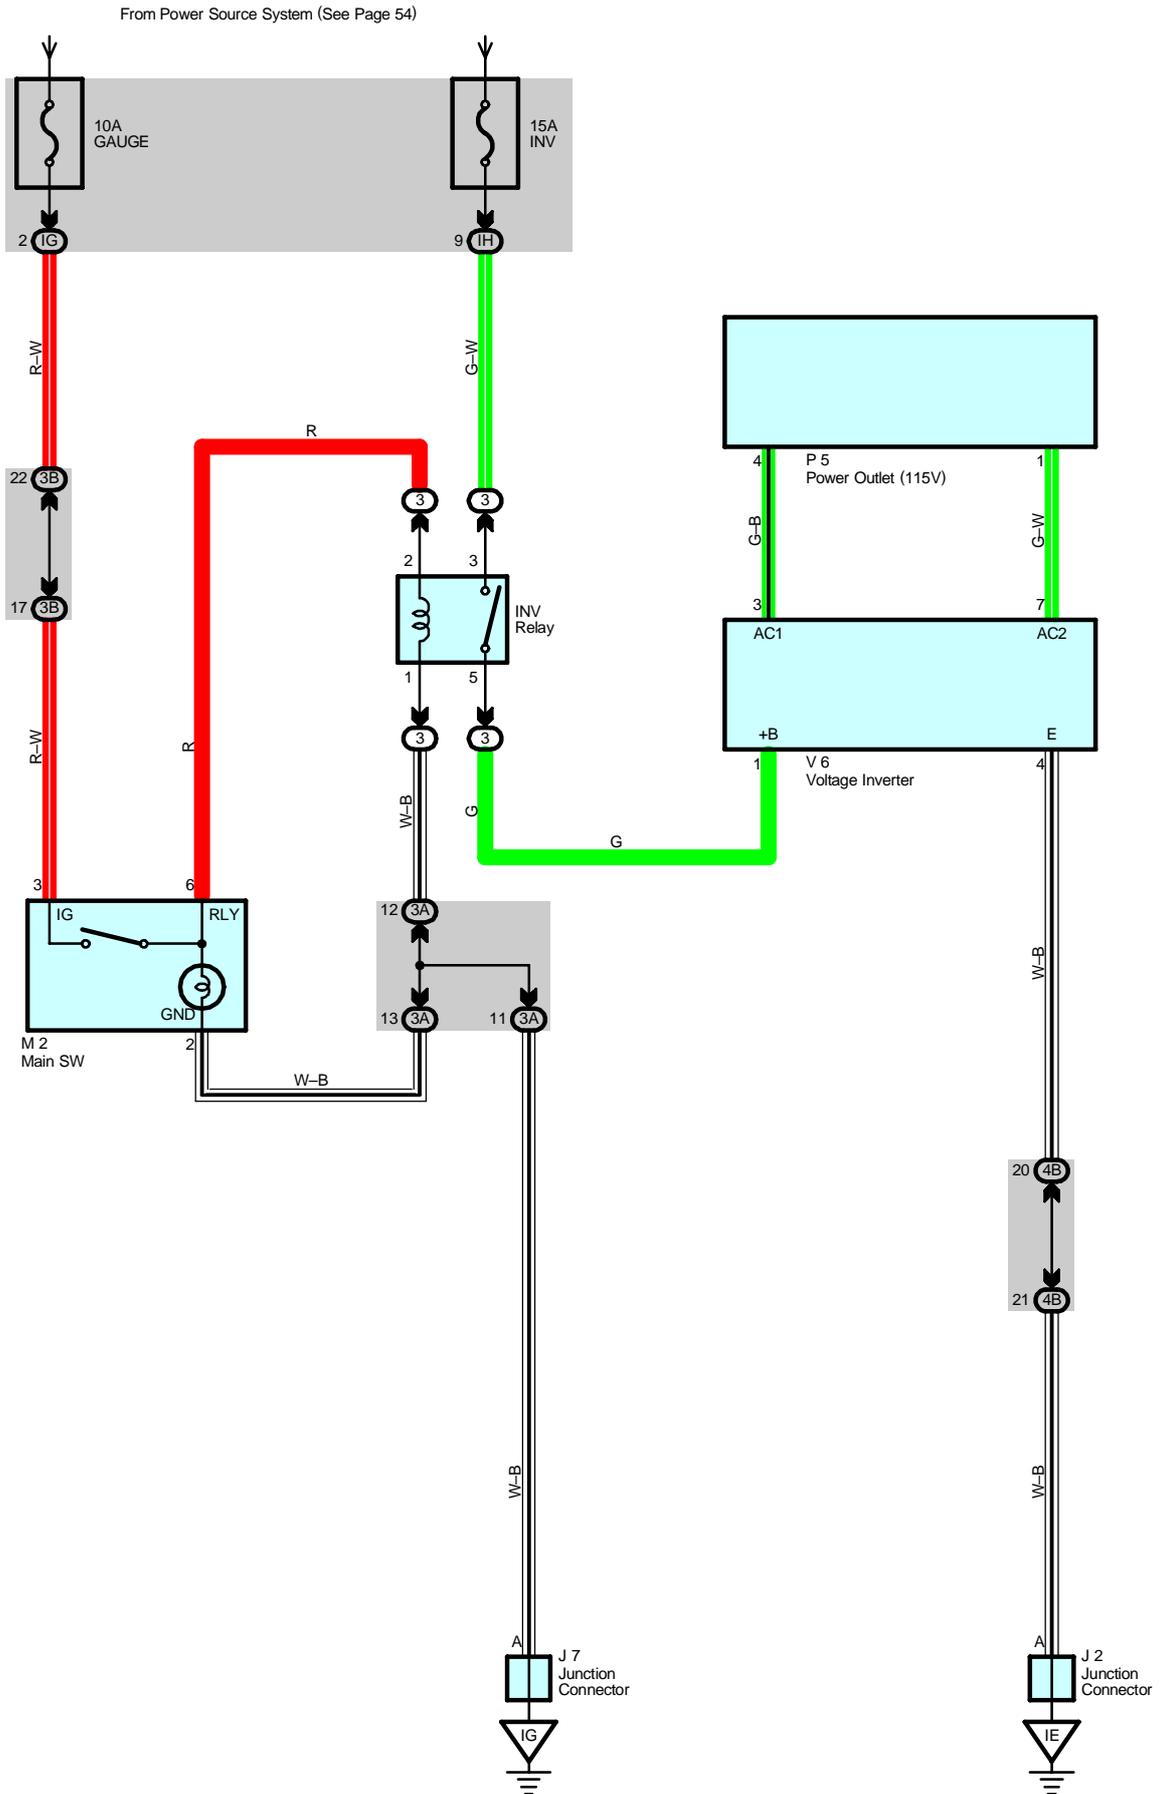

## Service Hints

### INV Relay

3-5 : Closed with ignition SW at ON position and Main SW at on

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
J2	<a href="#">39</a>	M2	<a href="#">39</a>	V6	<a href="#">39</a>
J7	<a href="#">39</a>	P5	<a href="#">39</a>		

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	<a href="#">28</a>	RH R/B (Right Side of the Instrument Panel Reinforcement)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	<a href="#">25</a>	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
3A	<a href="#">29</a>	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4B	<a href="#">32</a>	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

### : Ground Points

Code	See Page	Ground Points Location
IE	<a href="#">46</a>	Behind Combination Meter
IG	<a href="#">46</a>	Right Kick Panel