


Starting

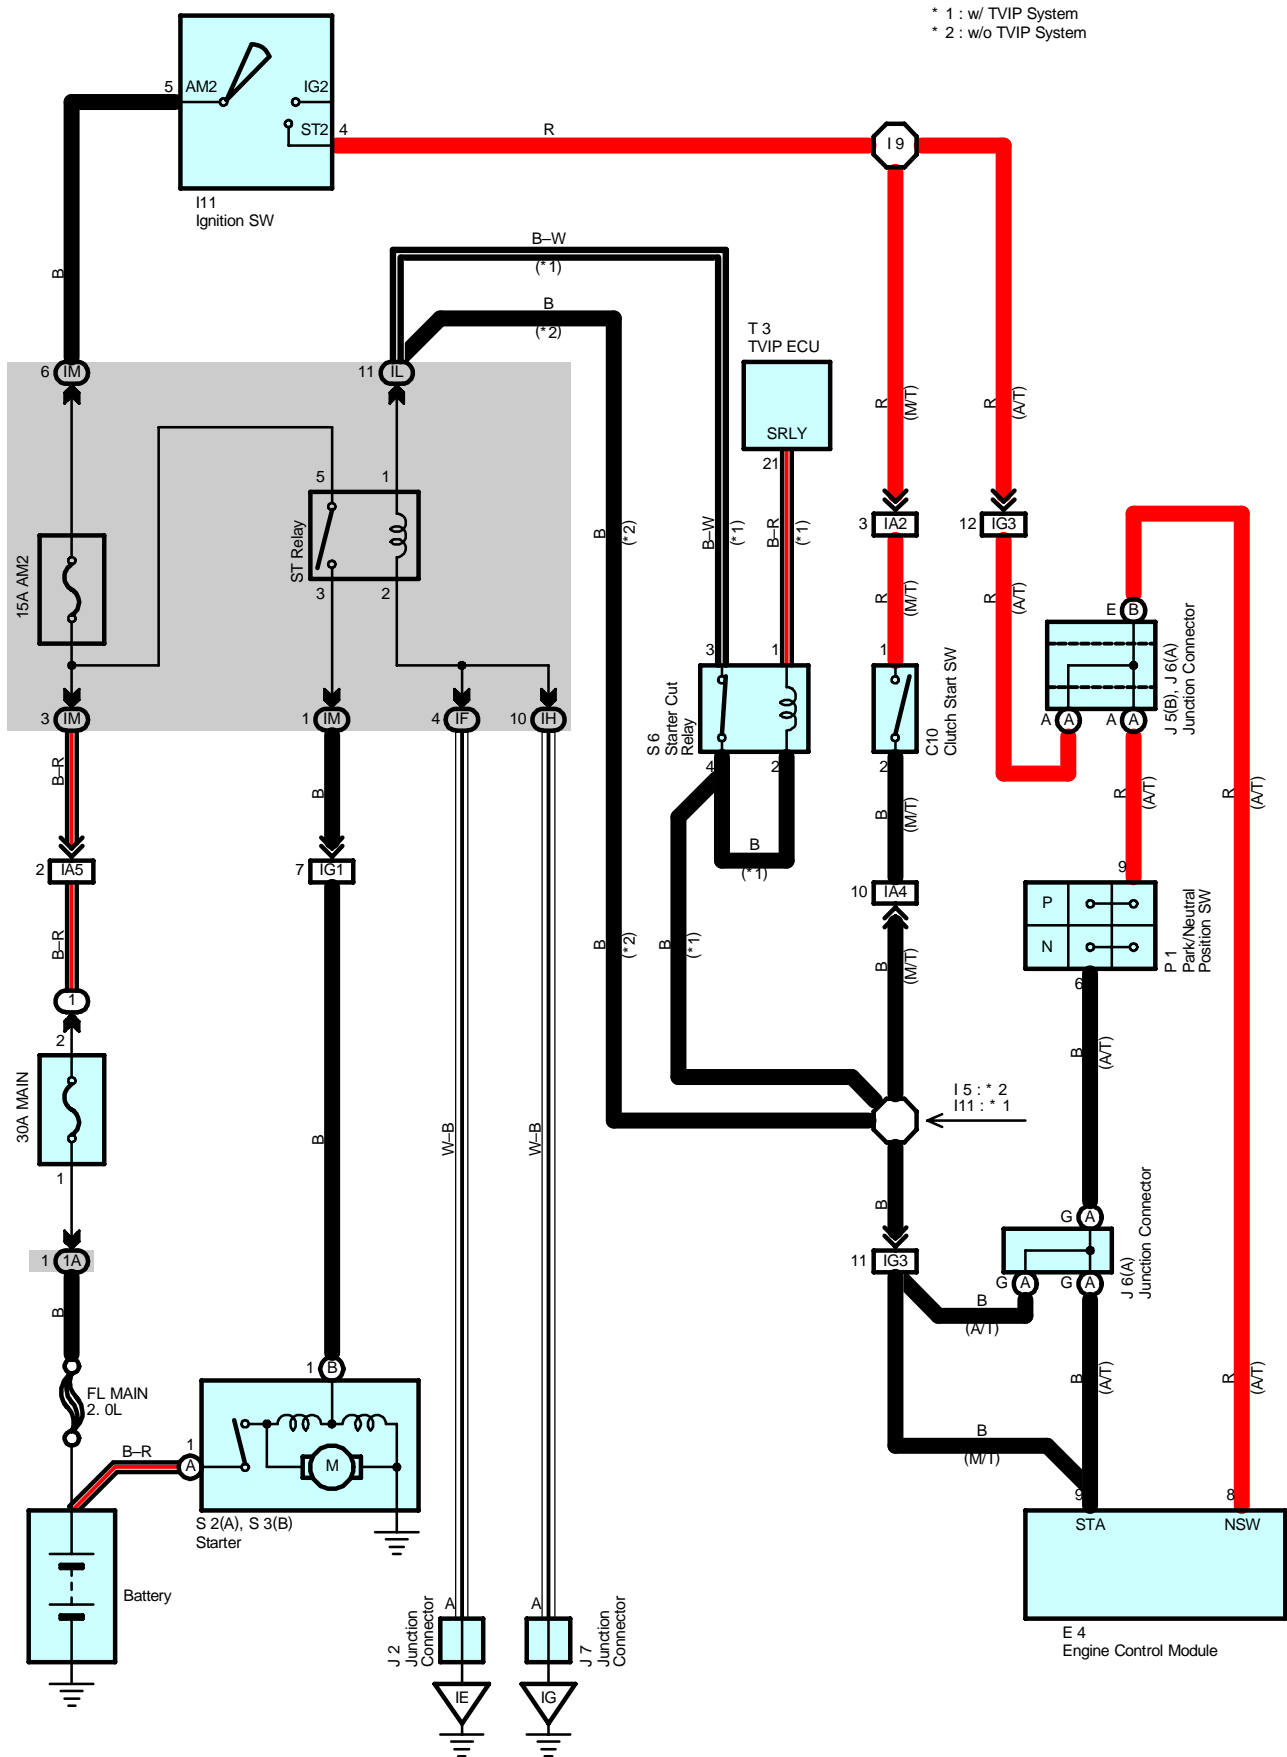

Service Hints

I11 Ignition SW

5-4 : Closed with the ignition SW at ST position

S2 (A), S3 (B) Starter

Points closed with the shift lever at P or N position and the ignition SW at ST position (A/T)

Points closed with the clutch pedal depressed and the ignition SW at ST position (M/T)

: Parts Location

Code		See Page		Code		See Page		Code		See Page	
C10		38		J6	A	39		S2	A	37 (1ZZ–FE)	
E4		38		J7		39		S3	B	35 (2ZZ–GE)	
I11		39		P1		35 (2ZZ–GE)				37 (1ZZ–FE)	
J2		39				37 (1ZZ–FE)				39	
J5	B	39		S2	A	35 (2ZZ–GE)		T3		39	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
IL	24	
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA4		
IA5		
IG1	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG3		

: Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
IG	46	Right Kick Panel

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	48	Instrument Panel Wire	I11	48	Instrument Panel Wire
I9					