


Charging

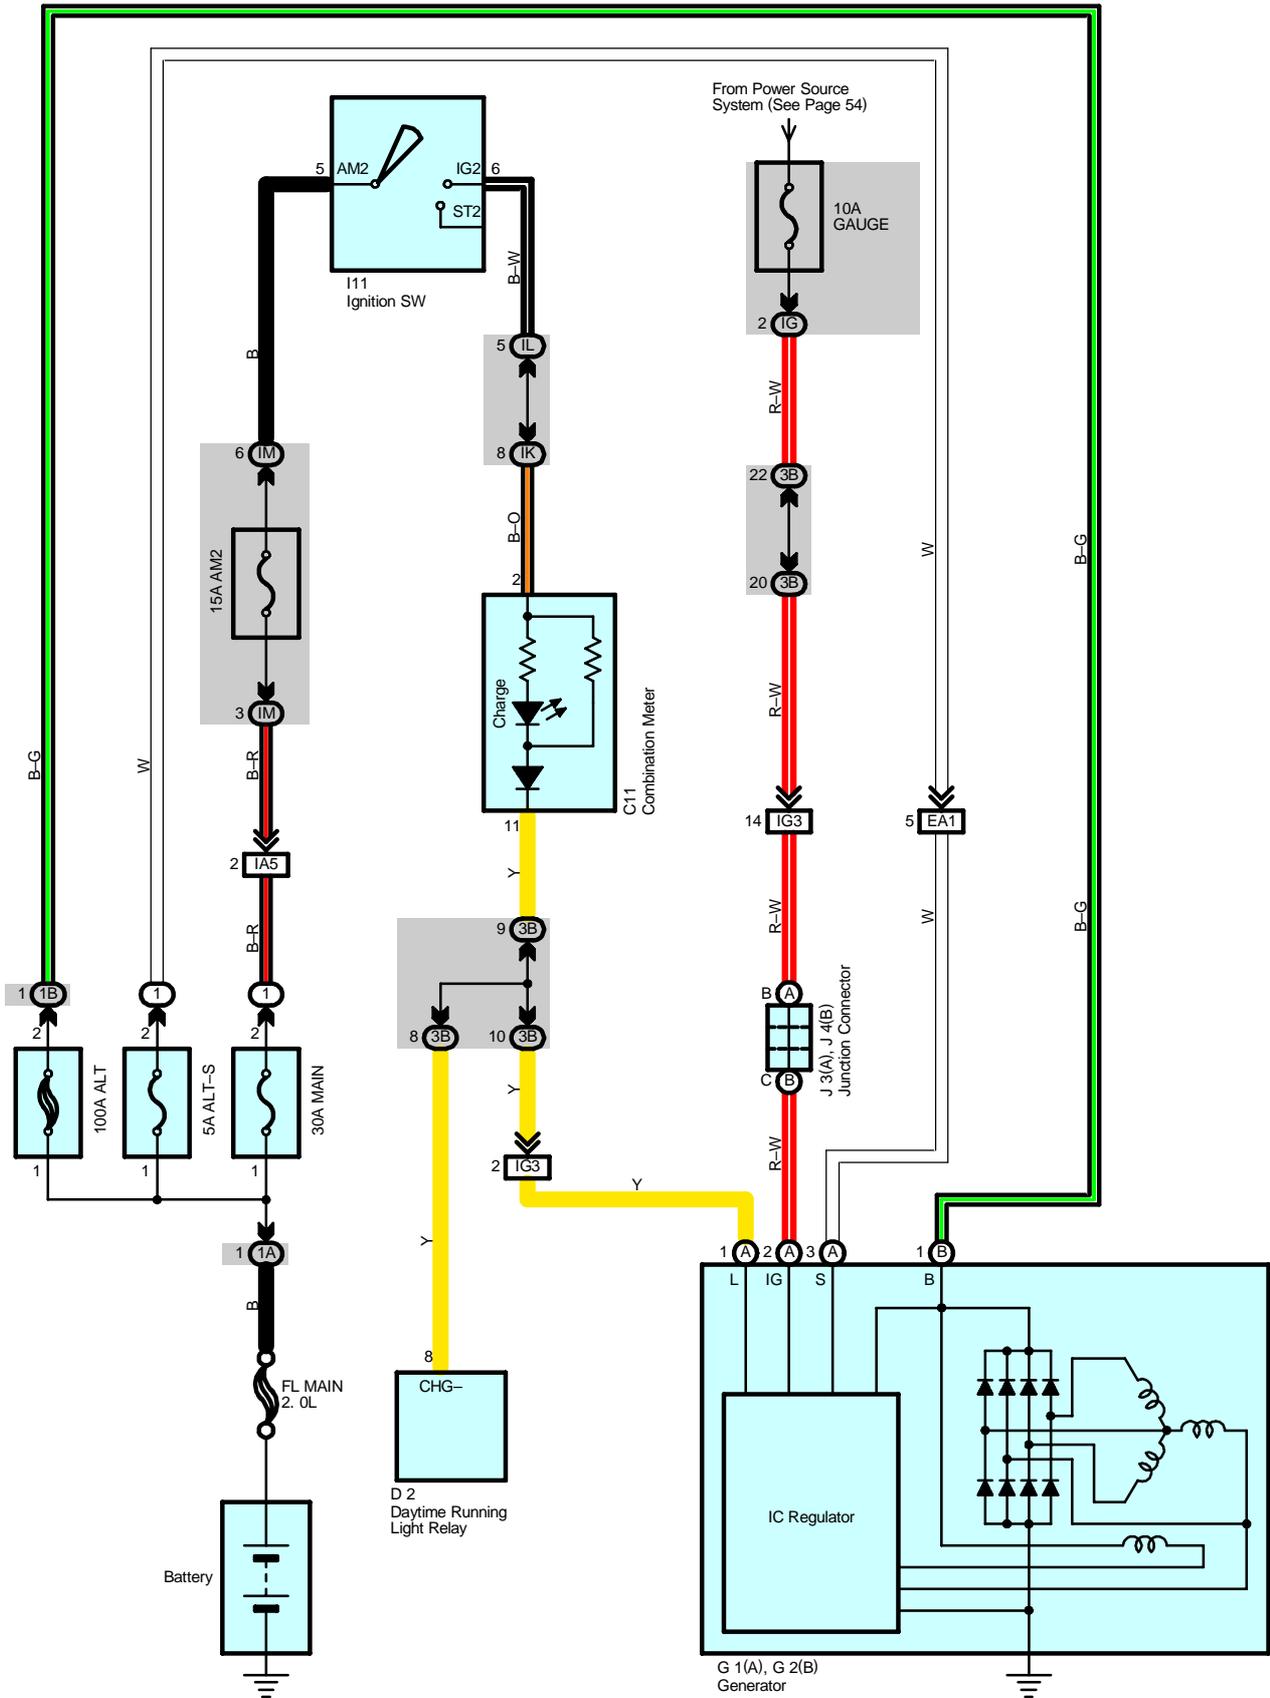

Service Hints

G1 (A) Generator

(A) 3-Ground : 13.2–14.0 volts with the engine running at 5000 rpm and 115°C (239°F)

(A) 1-Ground : 0–4 volts with the ignition SW at ON position and the engine not running

: Parts Location

Code		See Page	Code		See Page	Code		See Page
C11		38	G1	A	36 (1ZZ-FE)	I11		39
D2		38	G2	B	34 (2ZZ-GE)	J3	A	39
G1	A	34 (2ZZ-GE)			36 (1ZZ-FE)	J4	B	39

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IK	24	
IL		
IM		
1A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
1B		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	42 (2ZZ-GE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
	44 (1ZZ-FE)	
IA5	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)