


Front Fog Light

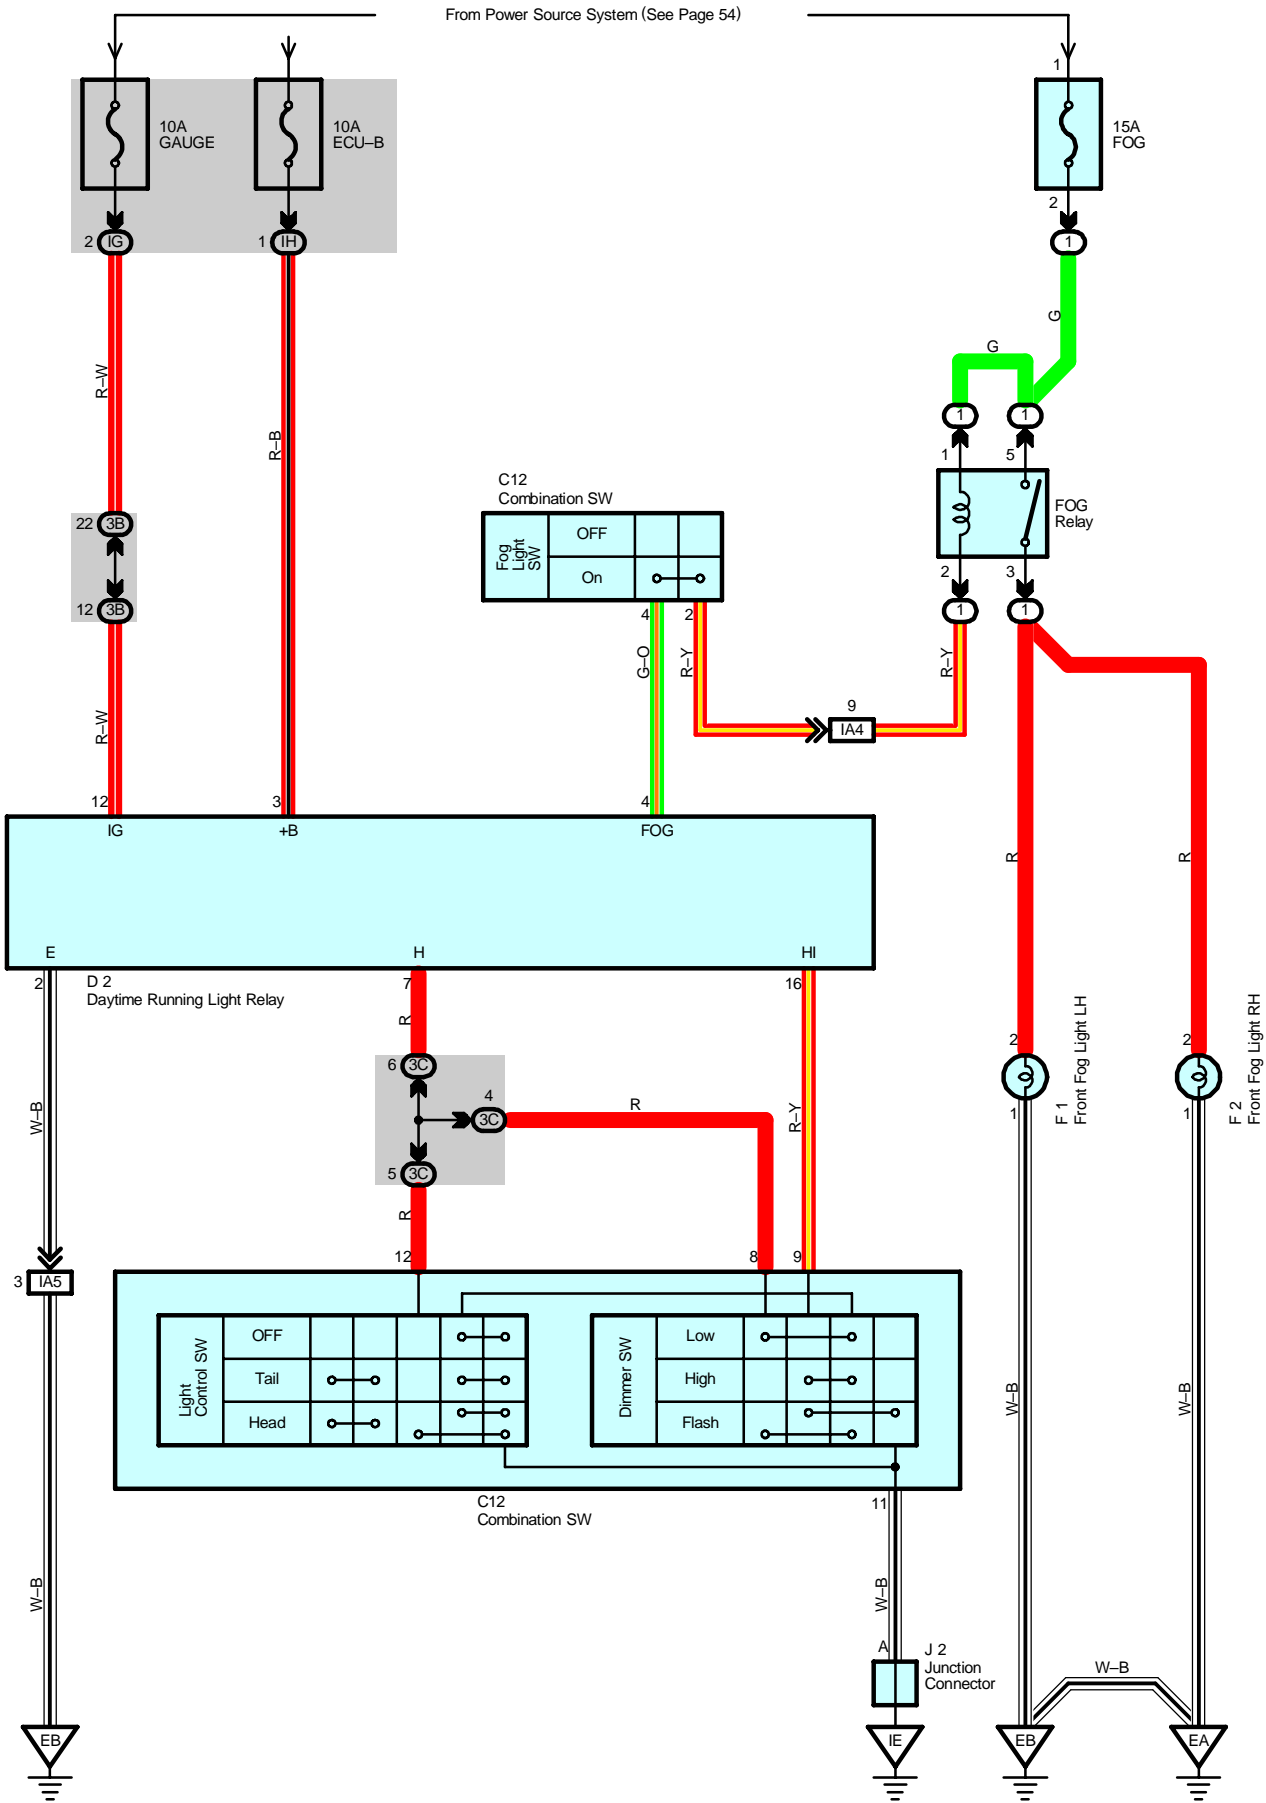

Service Hints**FOG Relay**

3-5 : Closed with light control SW at Head position, dimmer SW at Low position and fog light SW at On position

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C12	38	F1	36 (1ZZ-FE)	J2	39
D2	38	F2	34 (2ZZ-GE)		
F1	34 (2ZZ-GE)		36 (1ZZ-FE)		

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
IG	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IH		
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3C		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA5		

 : **Ground Points**

Code	See Page	Ground Points Location
EA	42 (2ZZ-GE)	Front Right Fender
	44 (1ZZ-FE)	
EB	42 (2ZZ-GE)	Front Left Suspension Tower
	44 (1ZZ-FE)	
IE	46	Behind Combination Meter