



F RELAY LOCATIONS

[Engine Compartment]

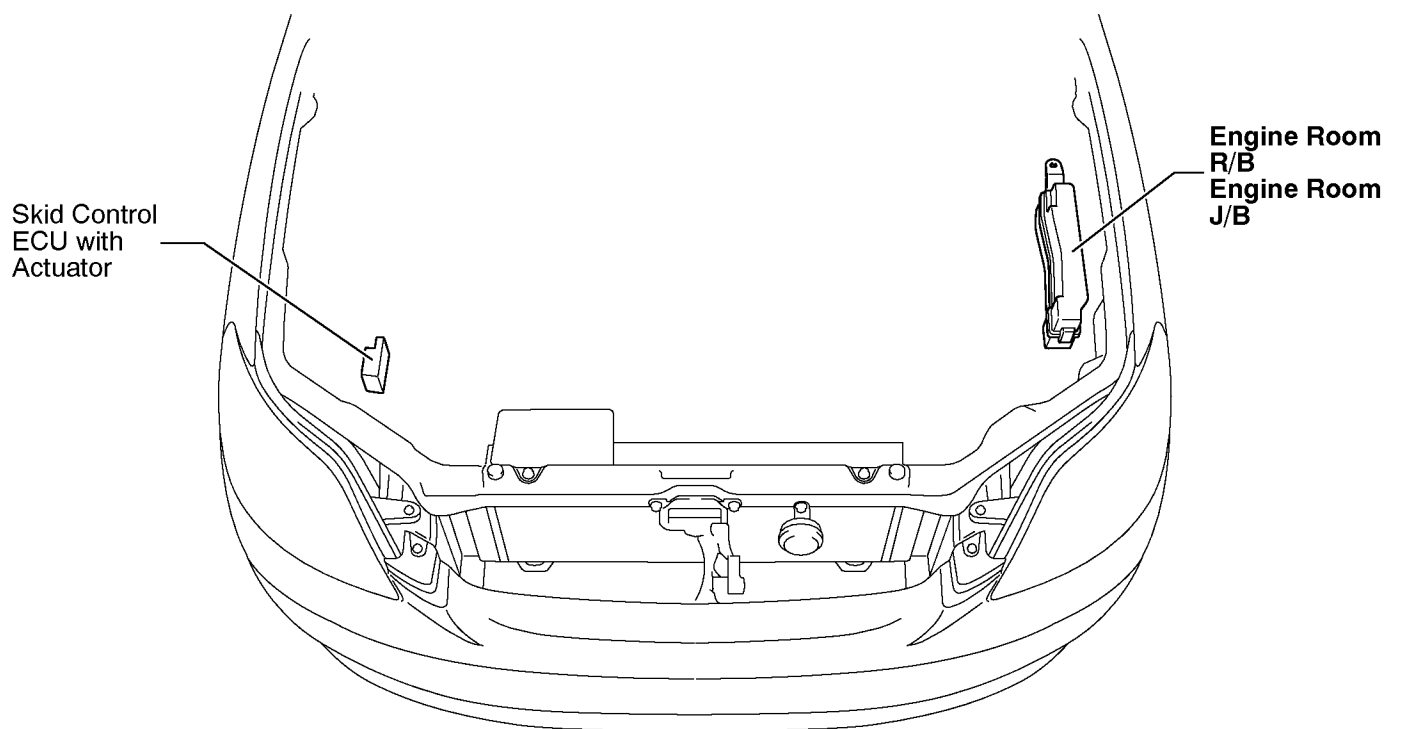


[Instrument Panel]

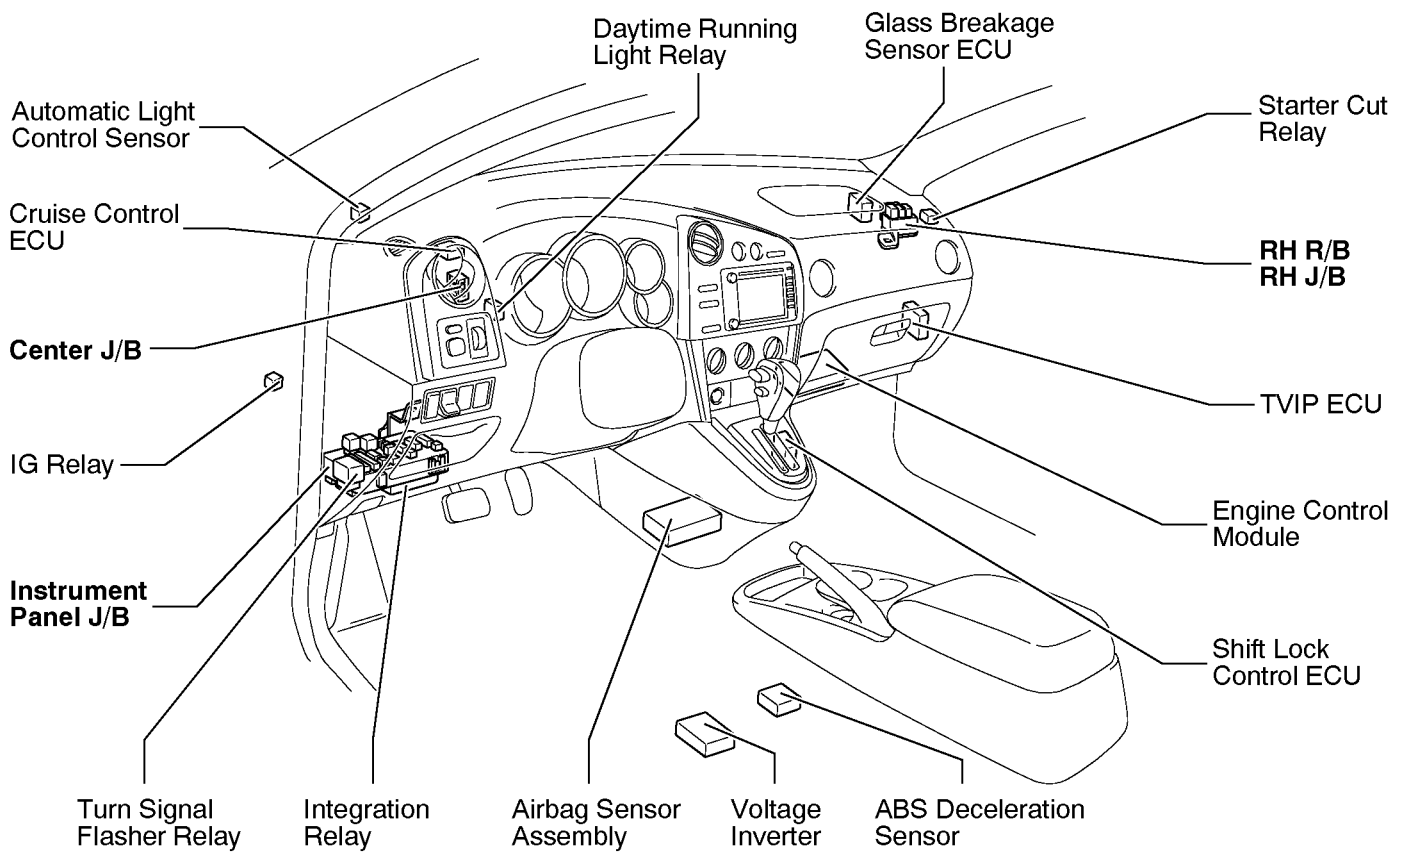

F RELAY LOCATIONS


[Body]

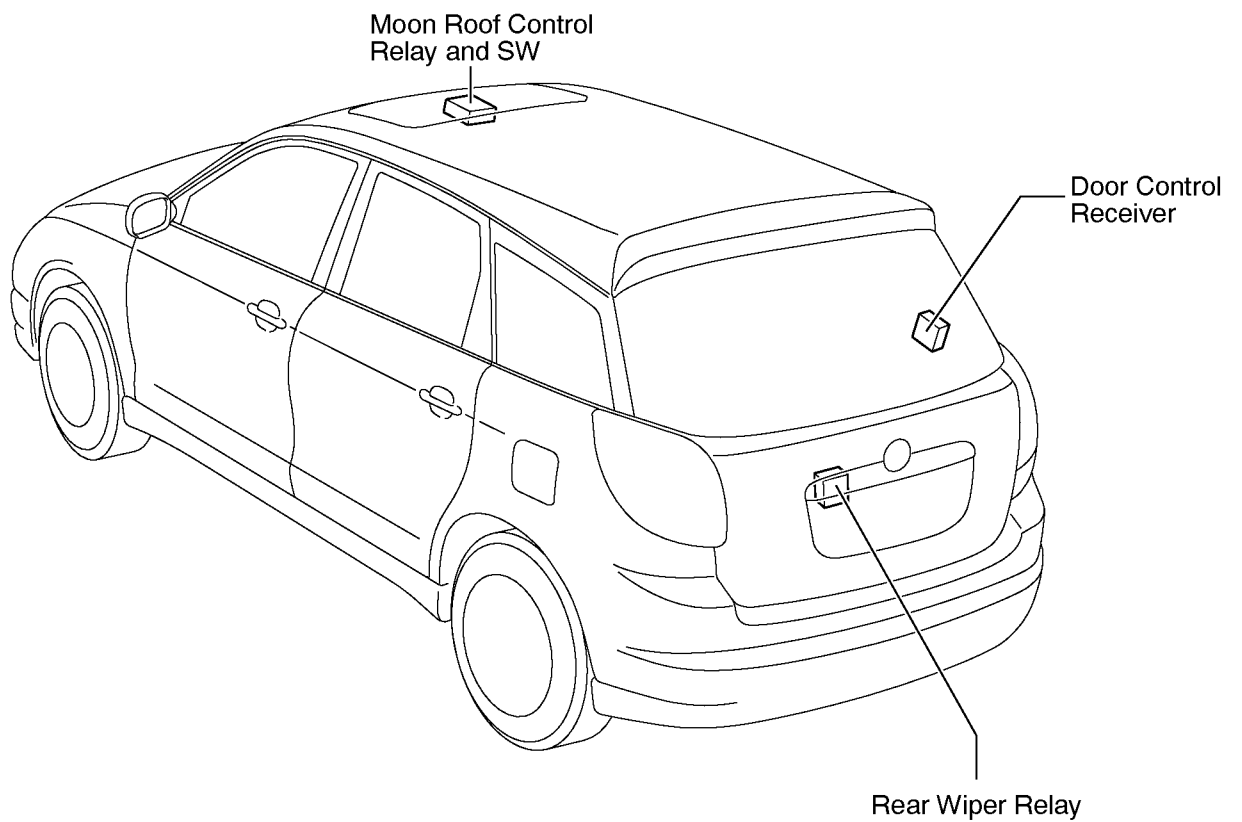

① : Engine Room R/B

○ : Engine Room J/B


Engine Compartment Left Side Page 20

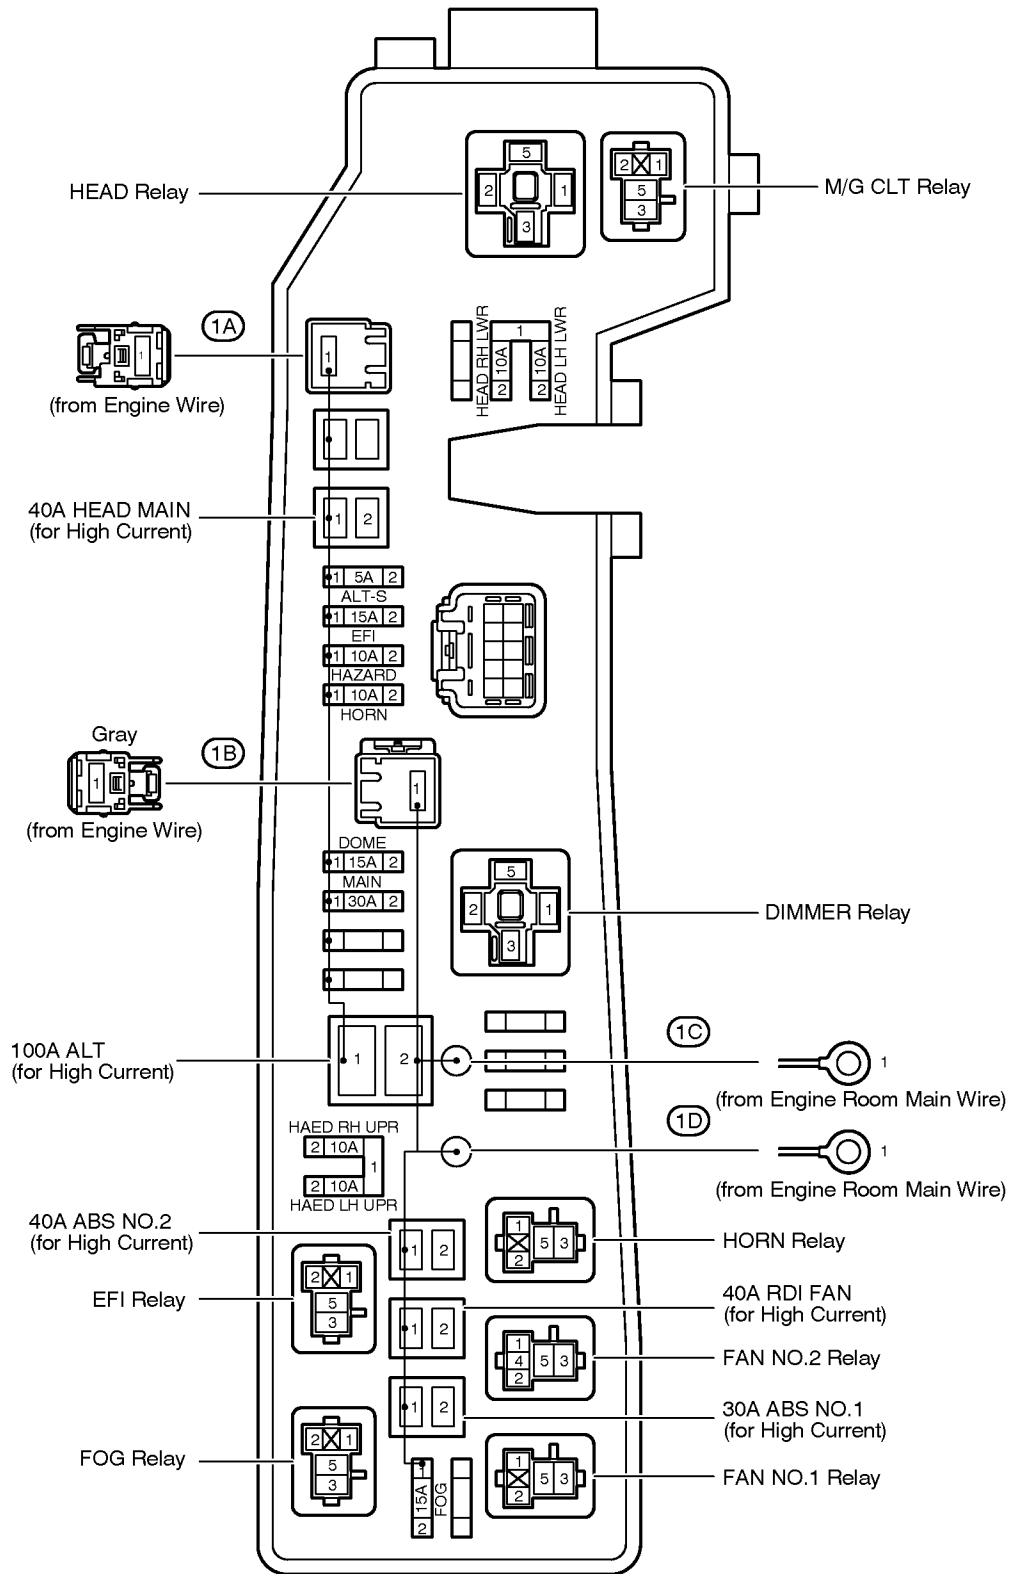


F RELAY LOCATIONS

 : Instrument Panel J/B


Lower Fuse Panel (See Page 21)

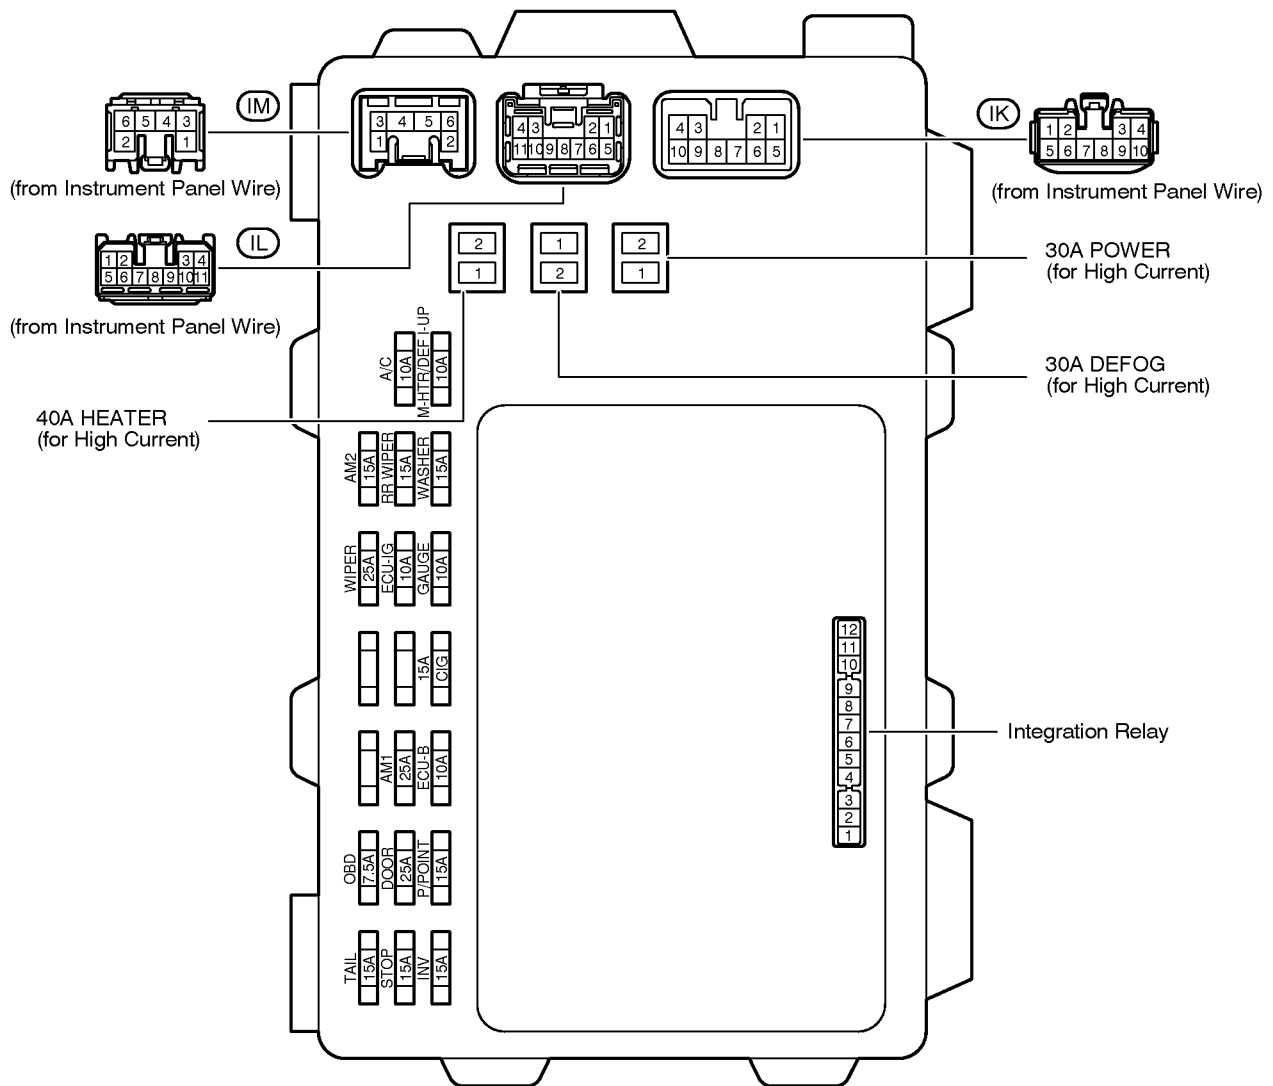

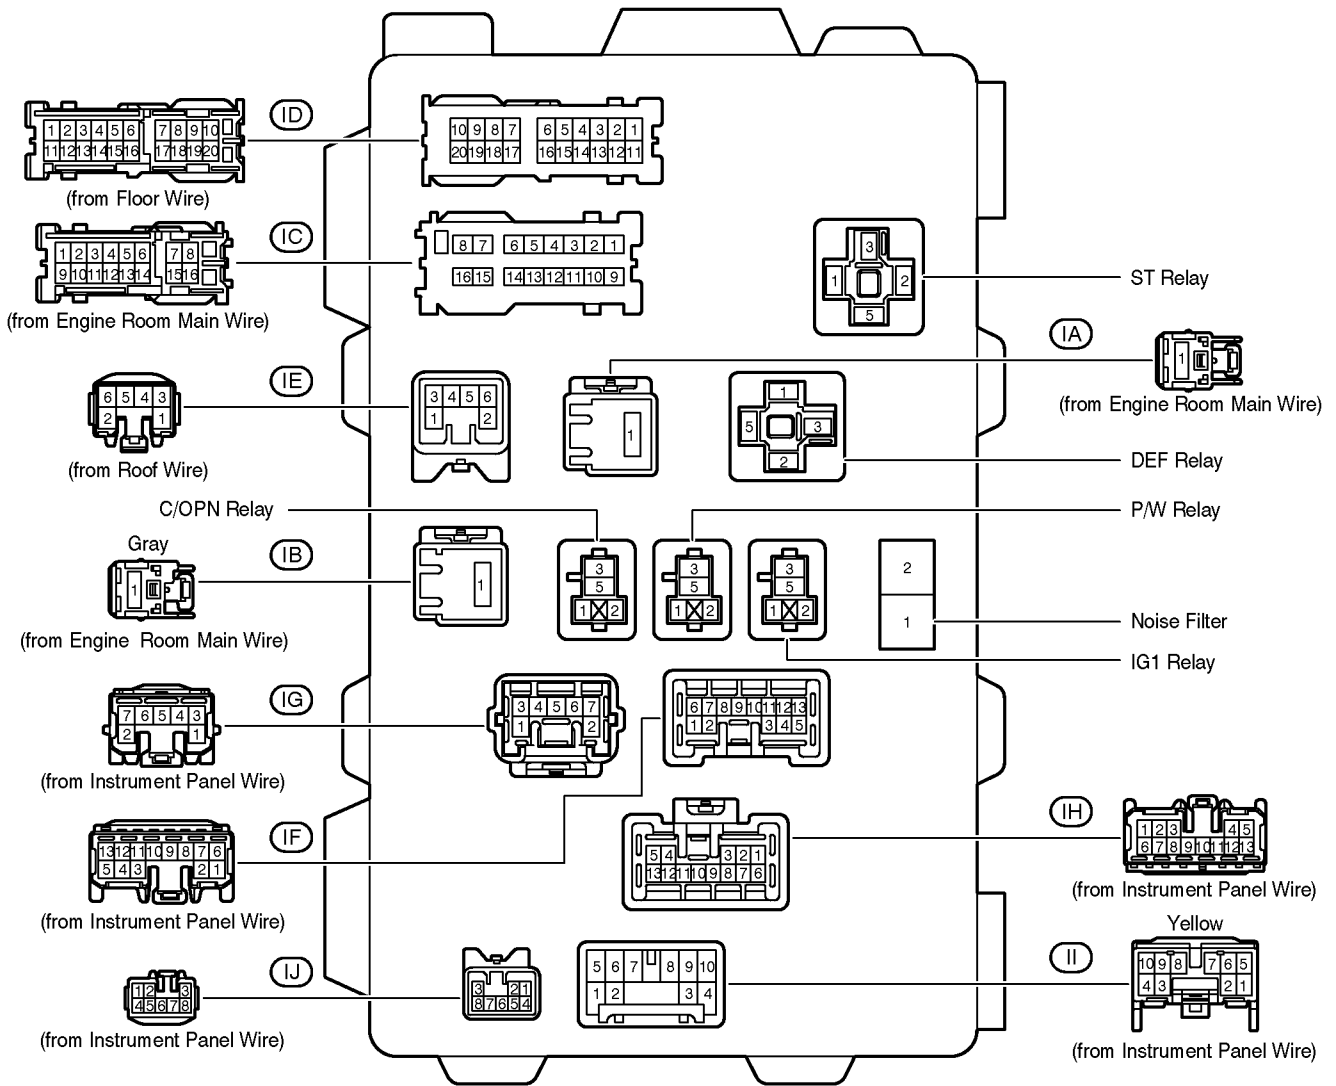


F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

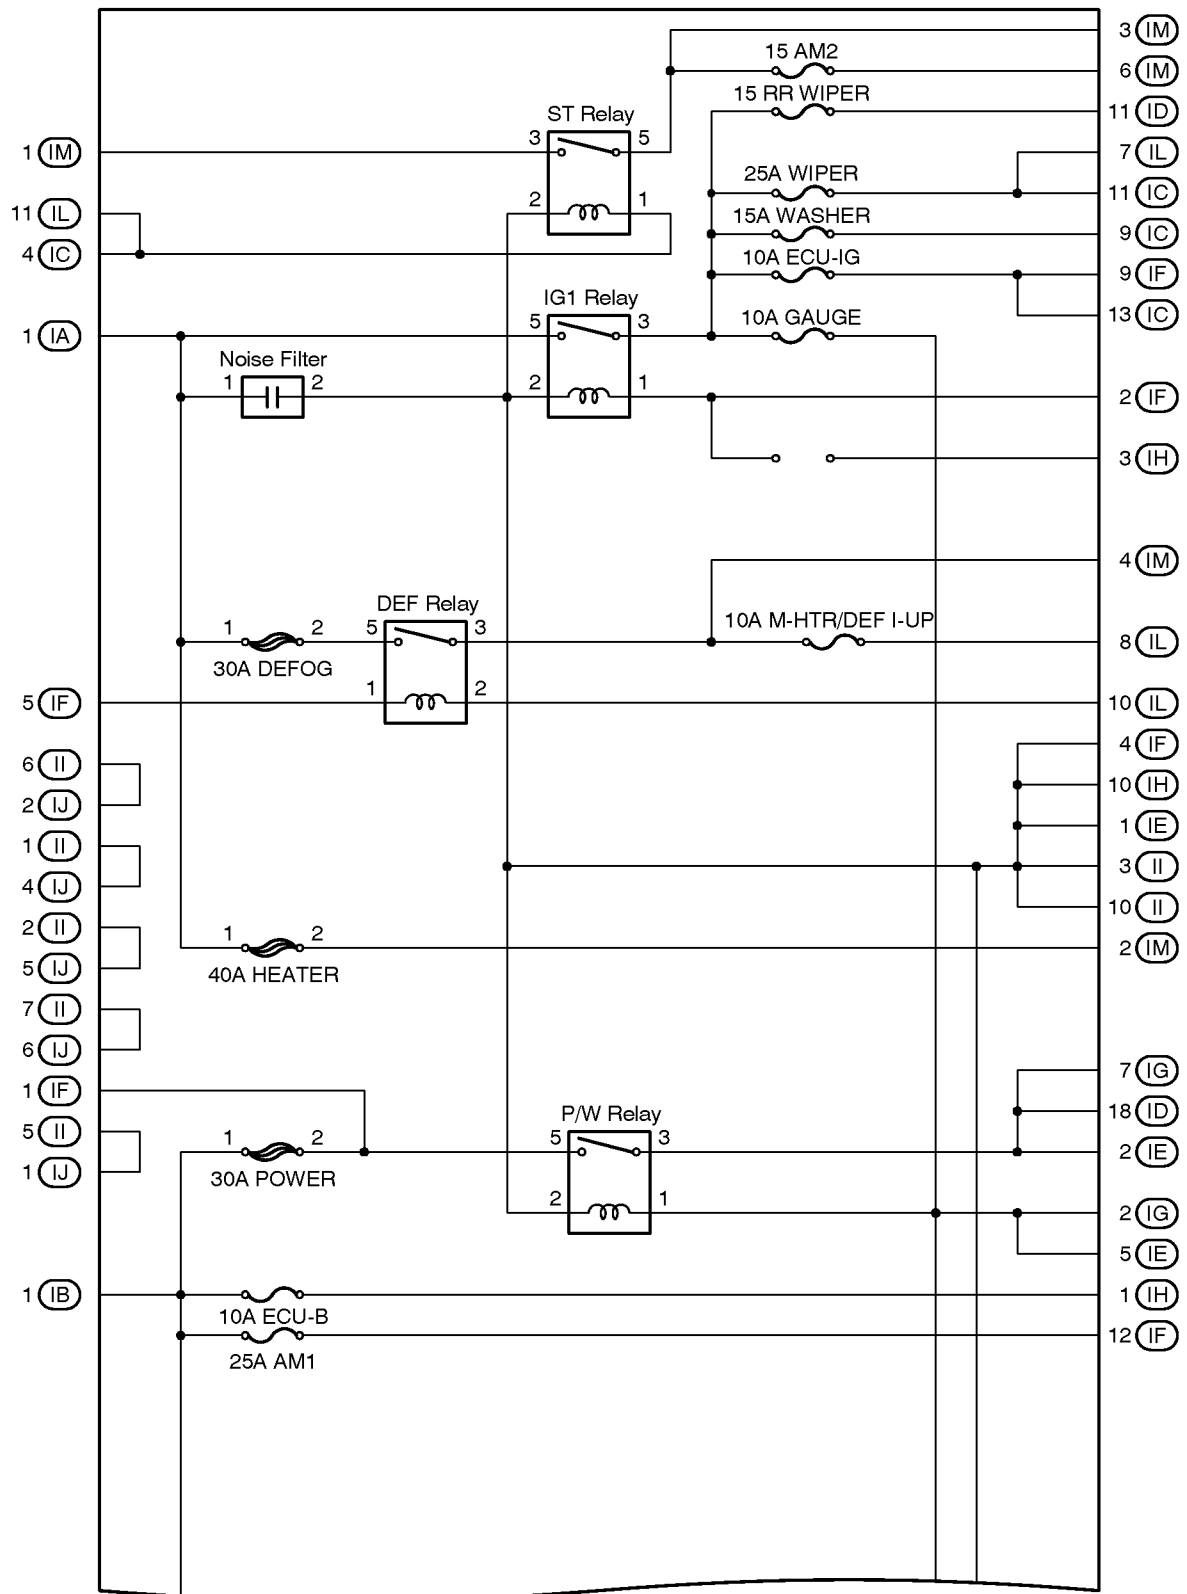


(Cont. Next Page)


(Cont'd)

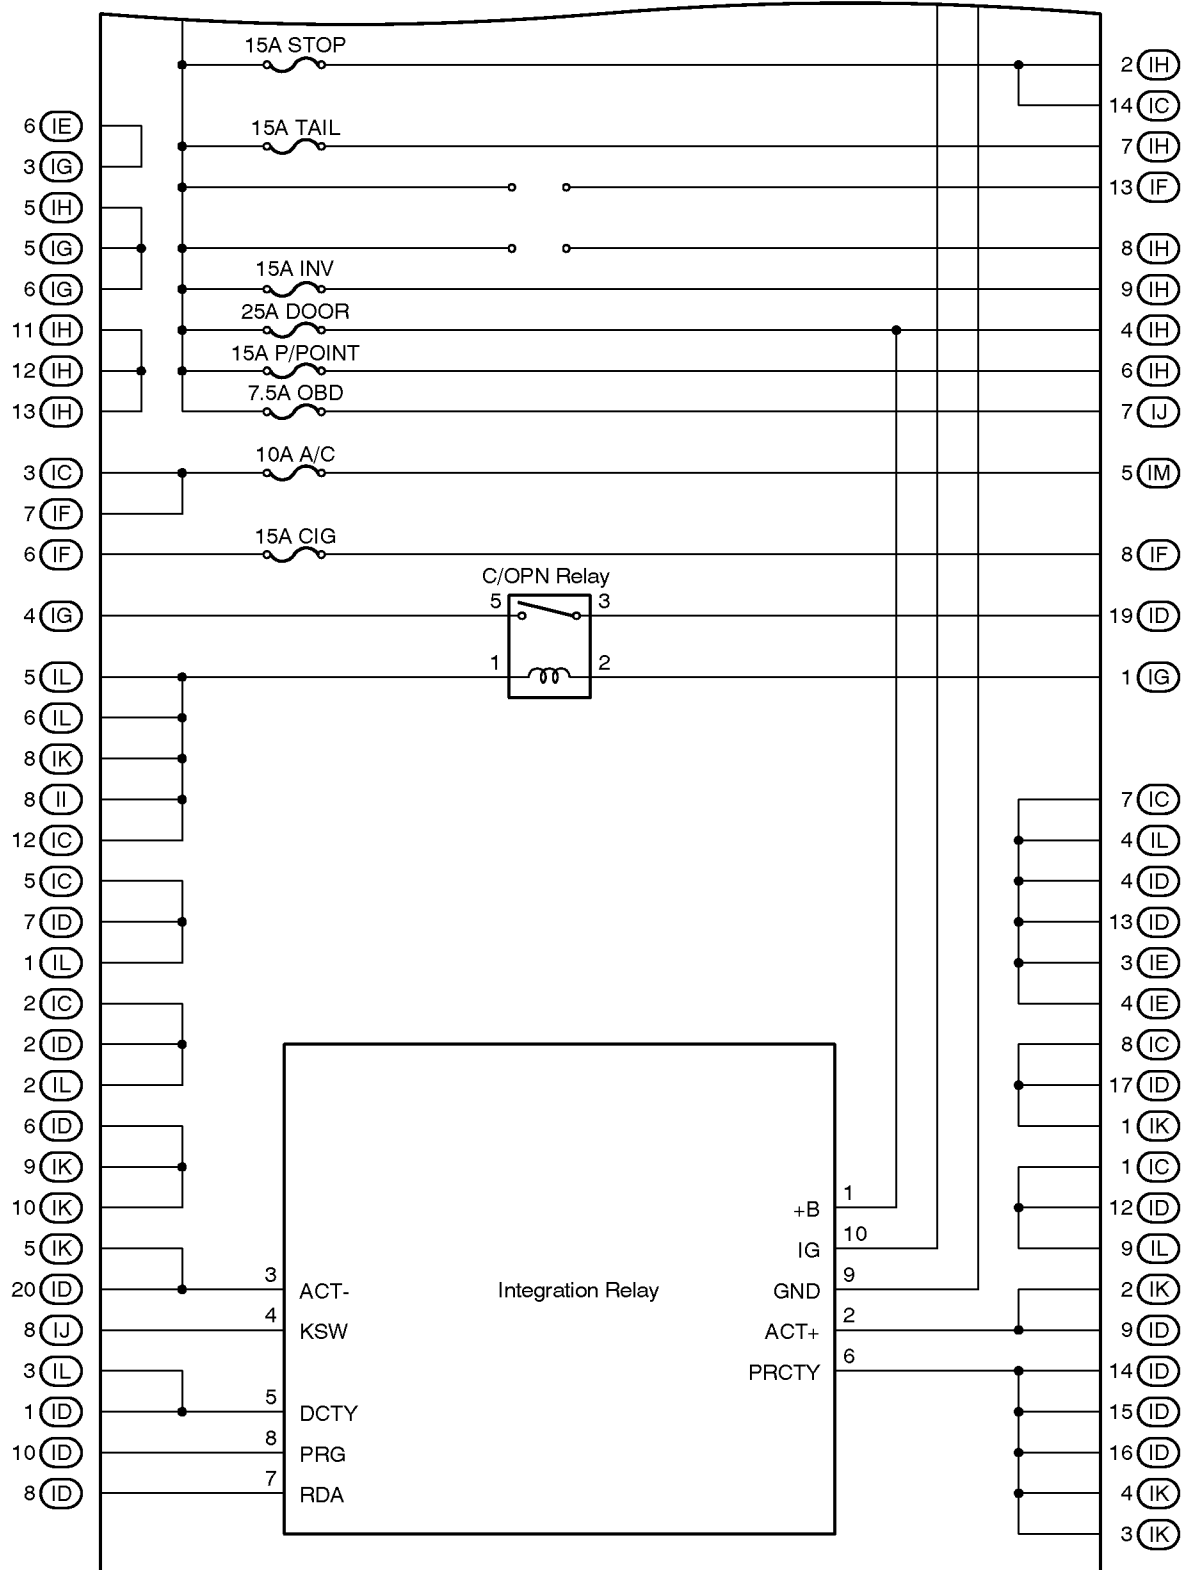

F RELAY LOCATIONS


 : RH R/B	<small>Right Side of the Instrument Panel Board Location (See Page 15)</small>
 : RH J/B	

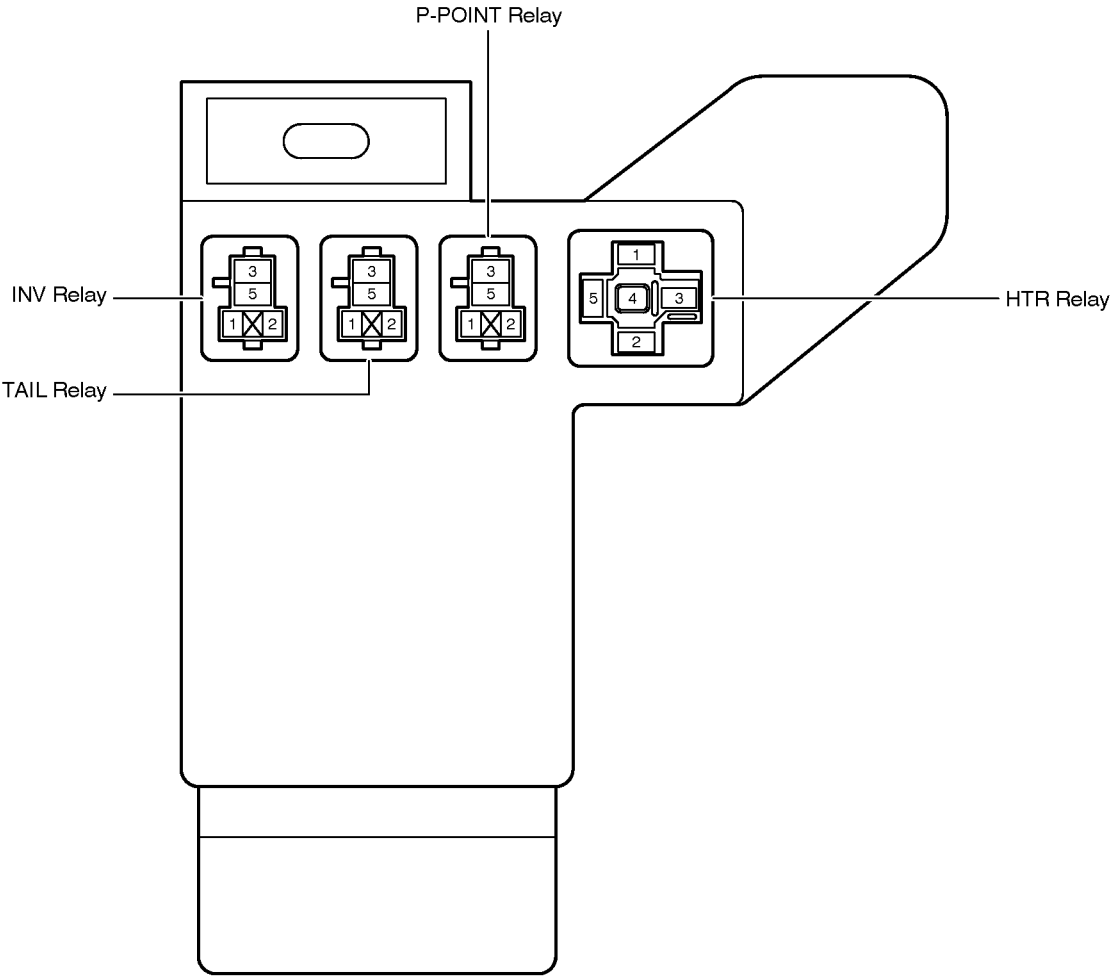

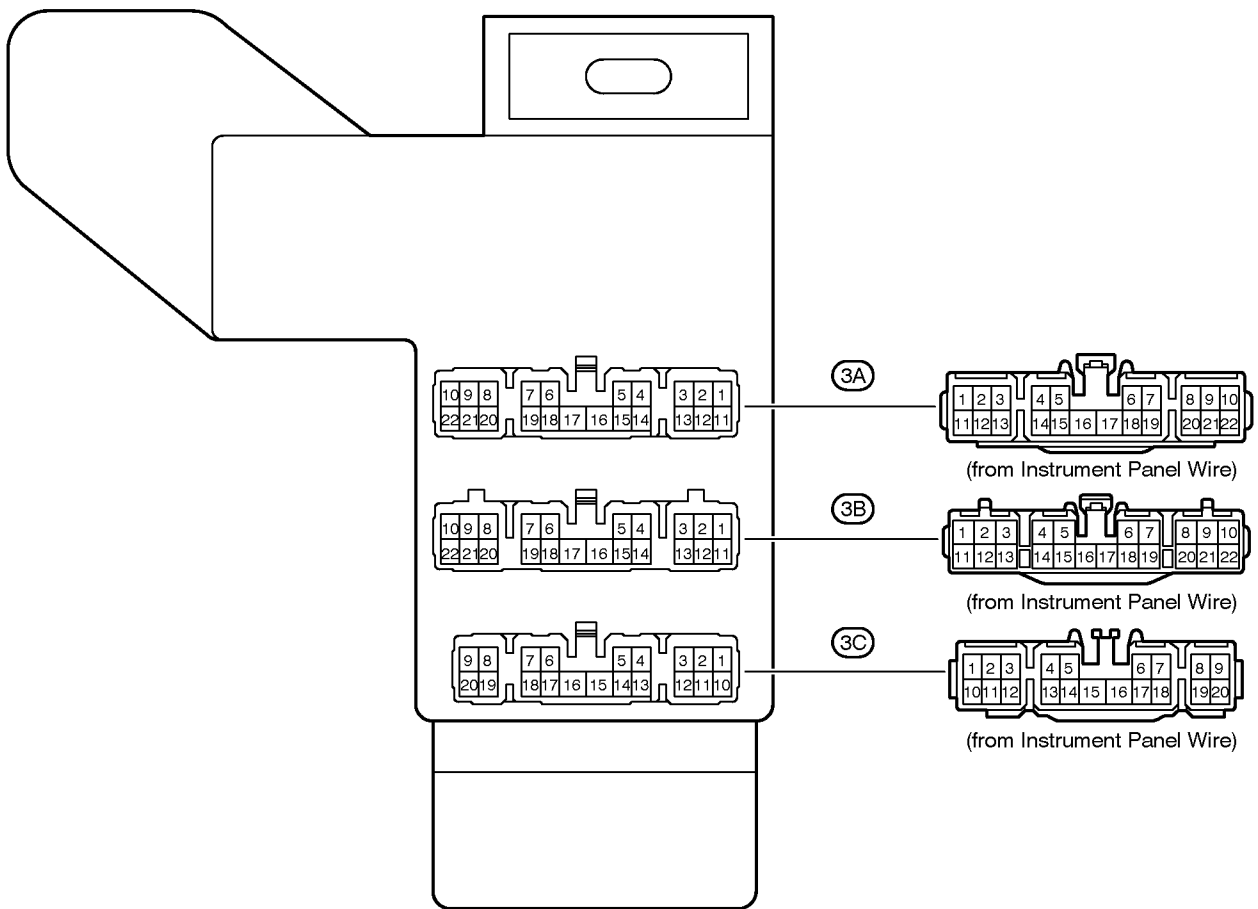

F RELAY LOCATIONS


[RH J/B Inner Circuit]

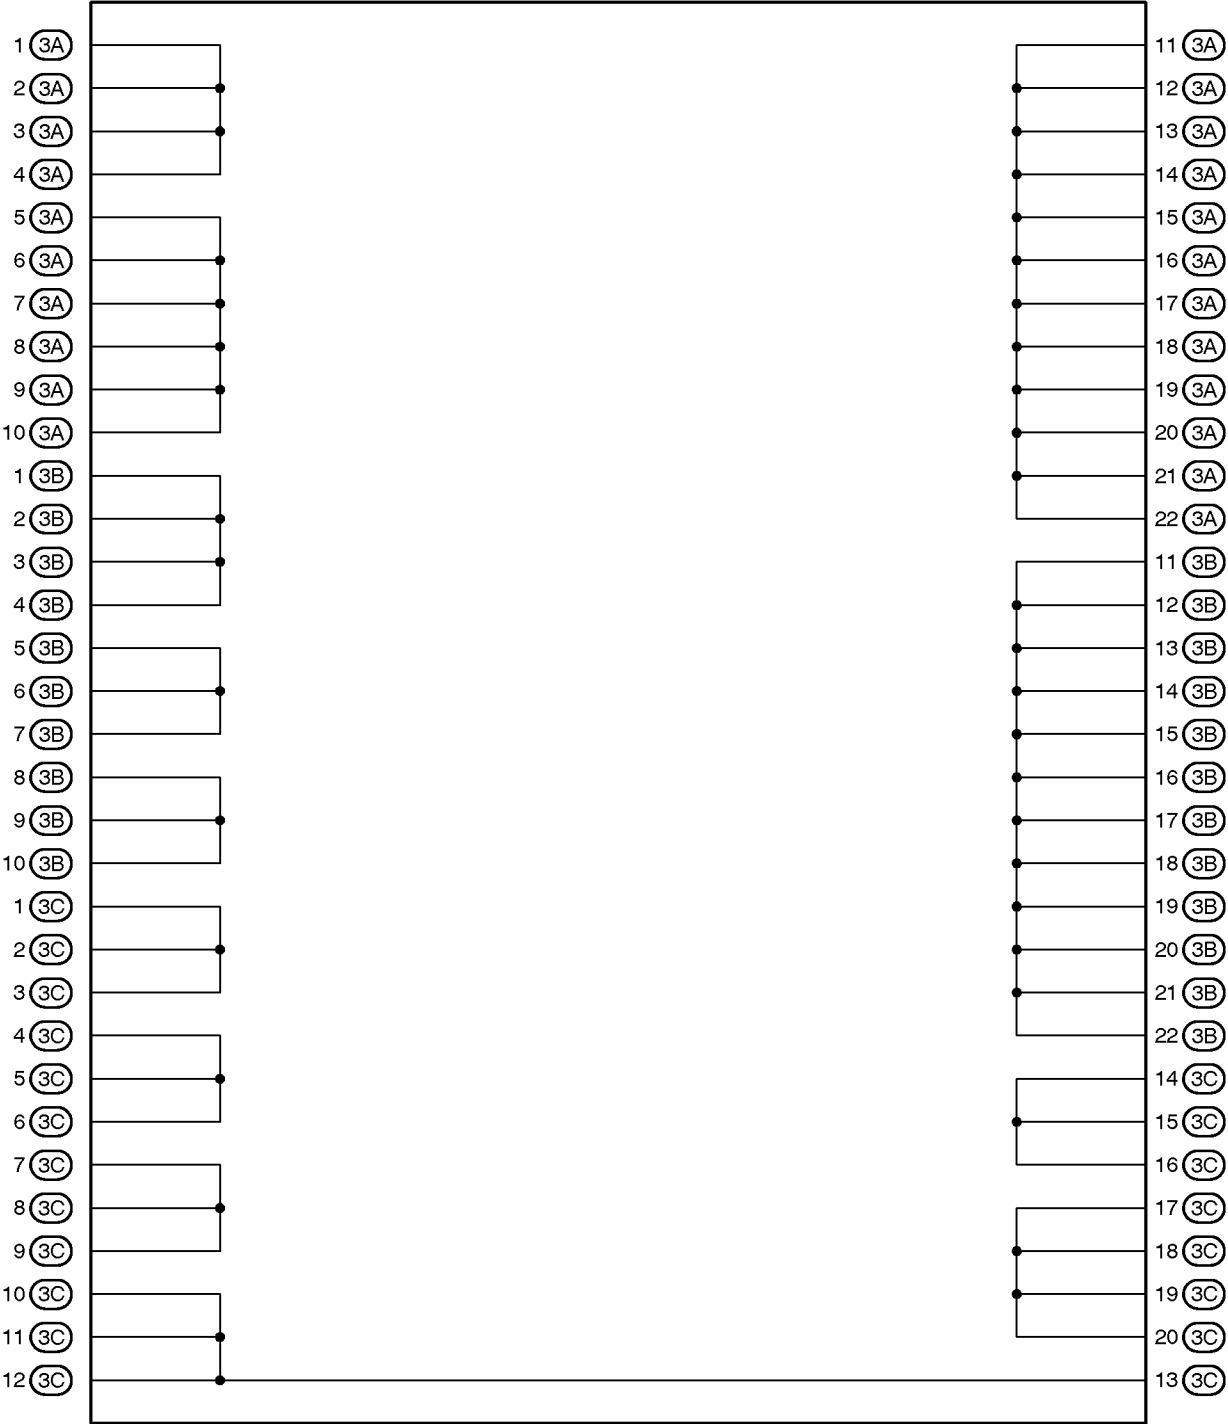

F RELAY LOCATIONS

 : Center J/B

Station/On Combination Meter (See Page 21)

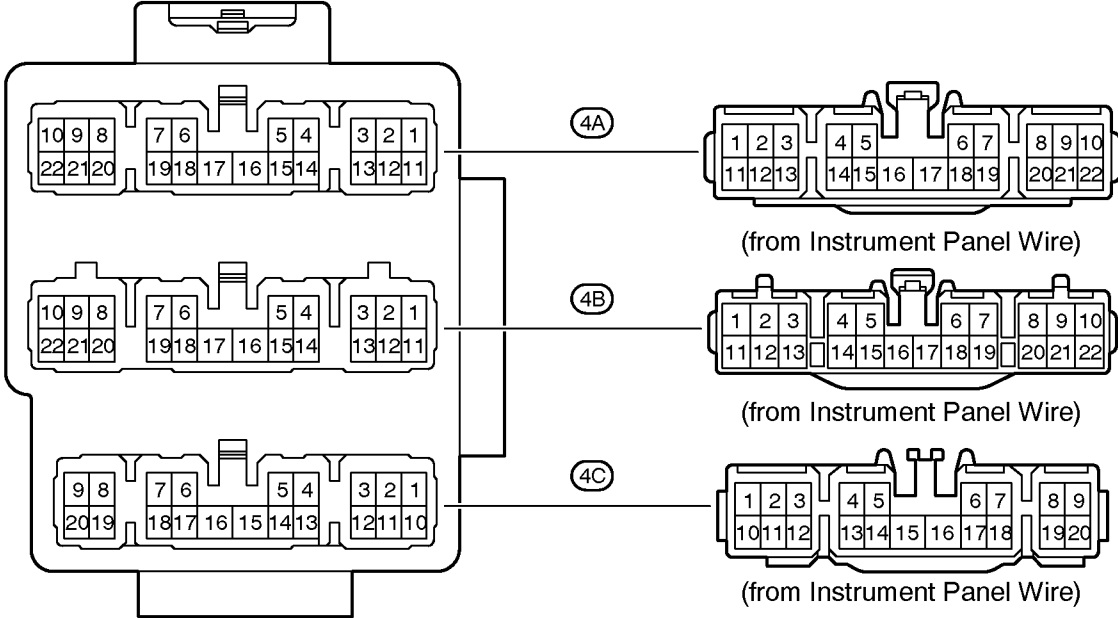

[Center J/B Inner Circuit]