


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[2ZZ-GE]

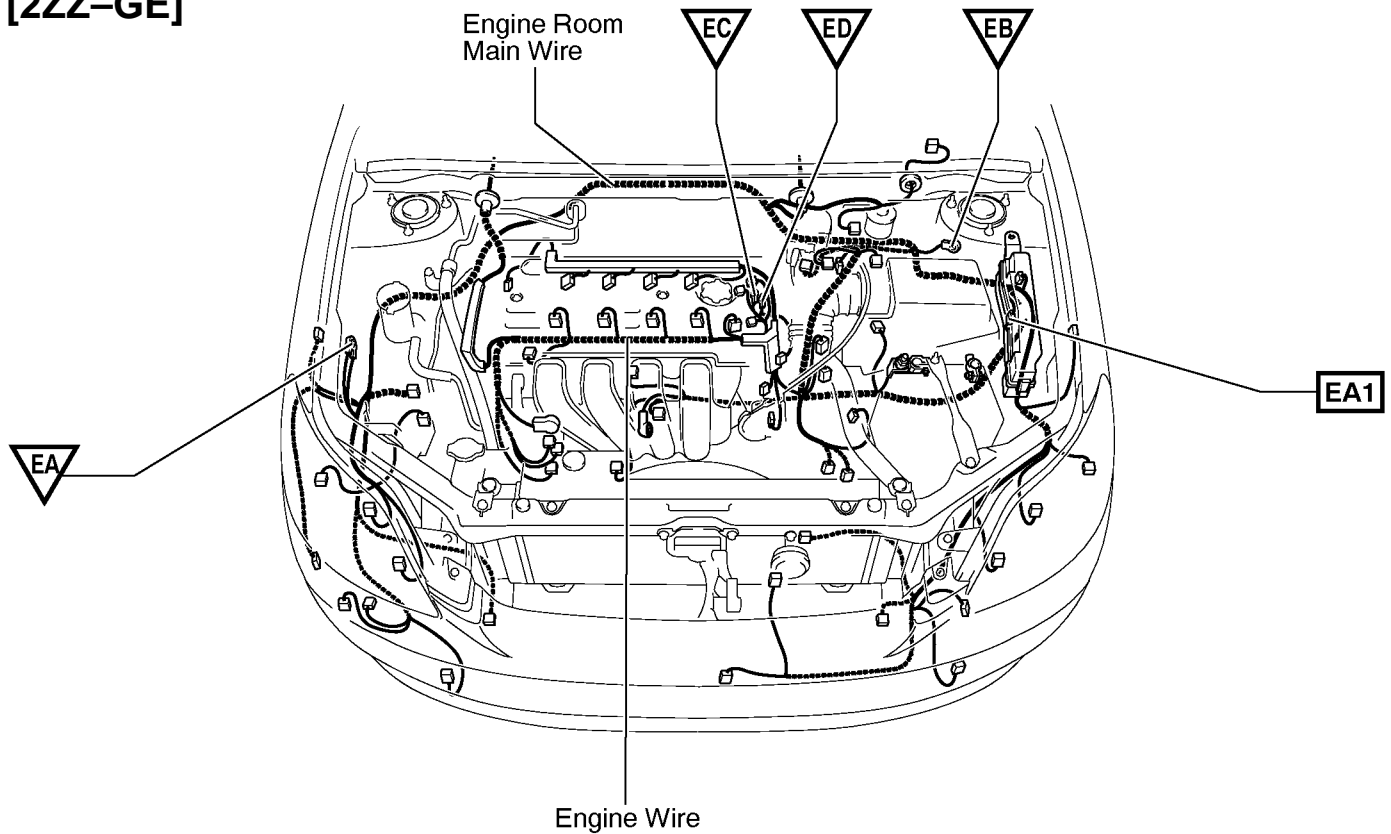

○ : Location of Splice Points

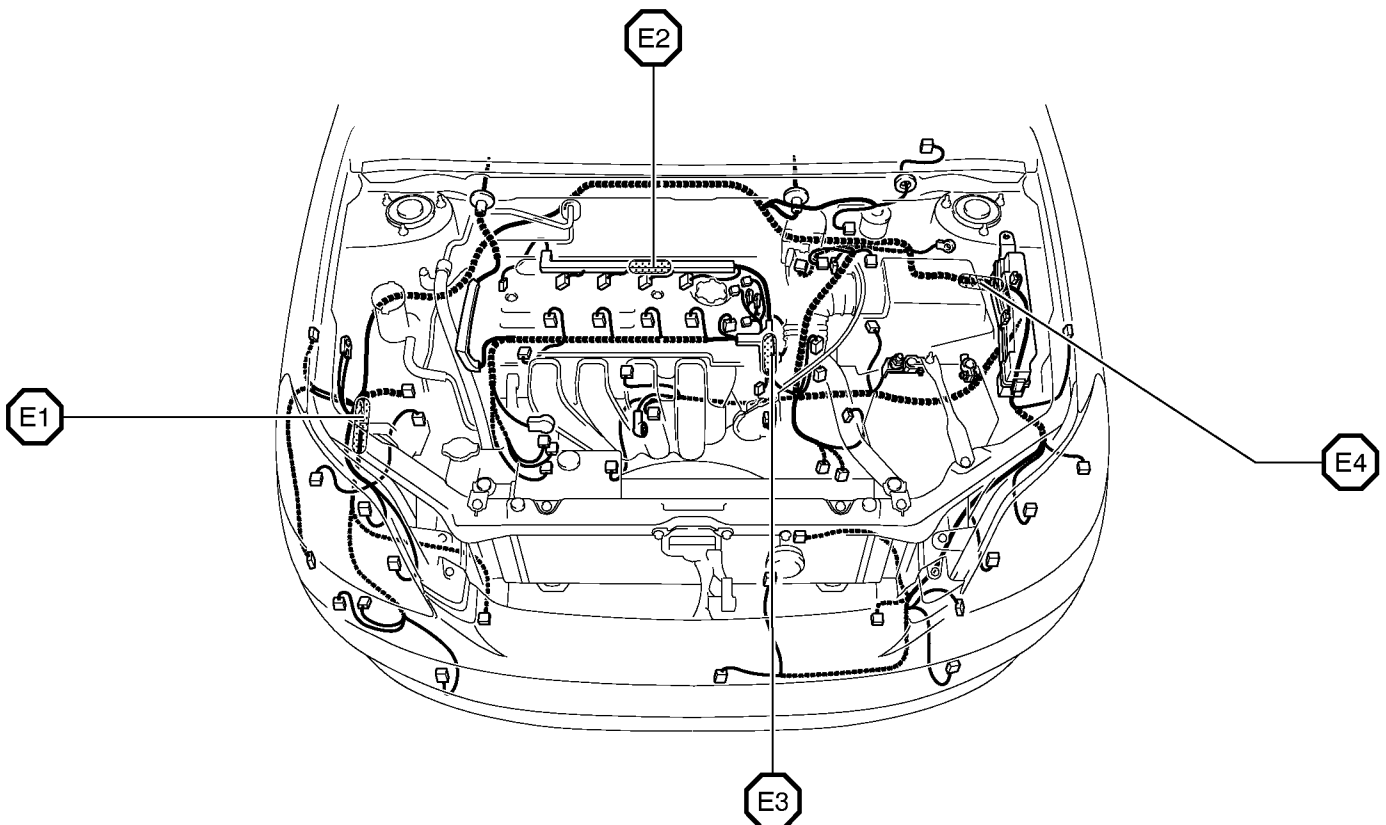

Connector Joining Wire Harness and Wire Harness

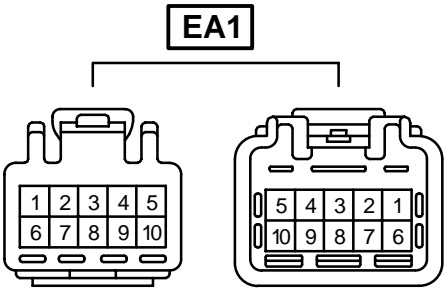


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[1ZZ-FE]

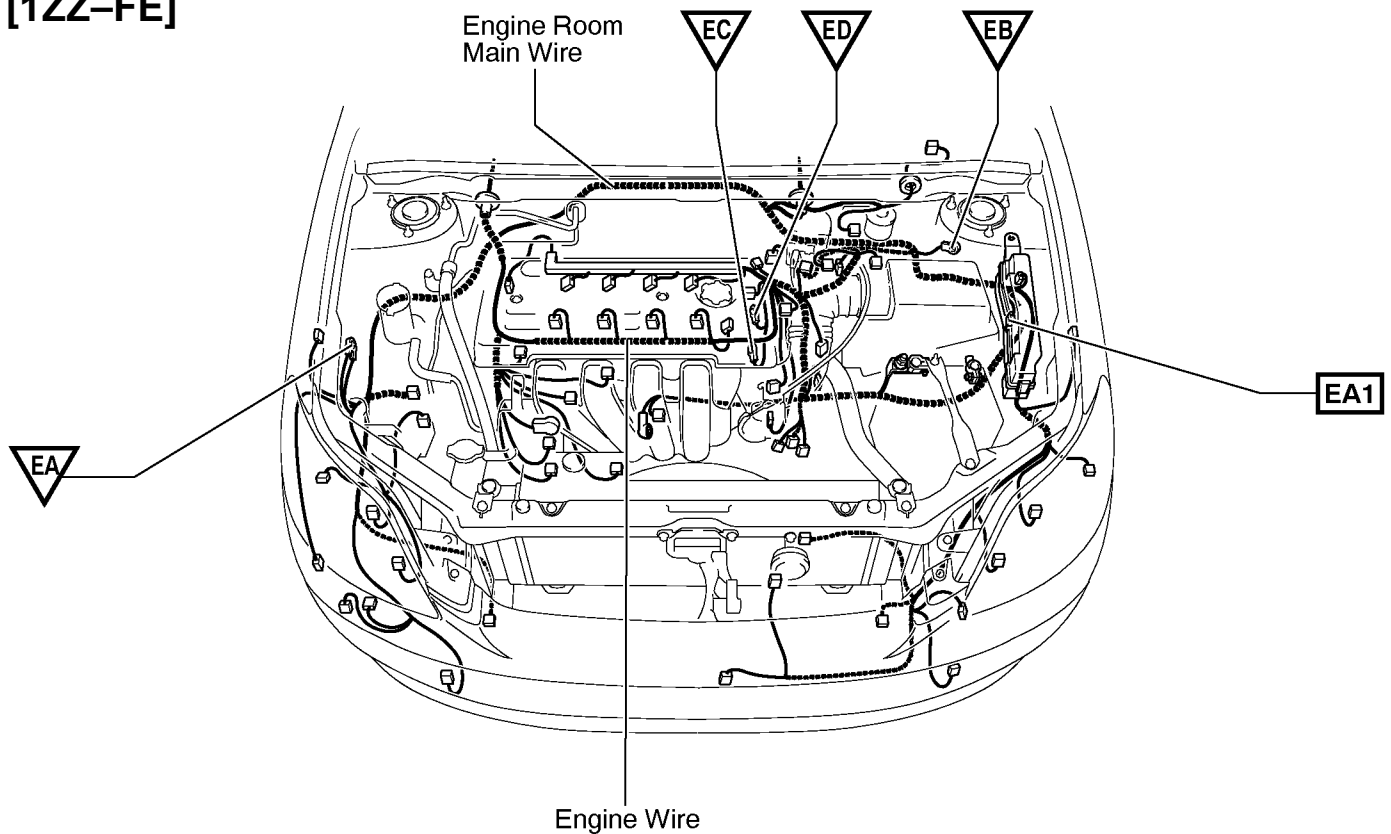

○ : Location of Splice Points

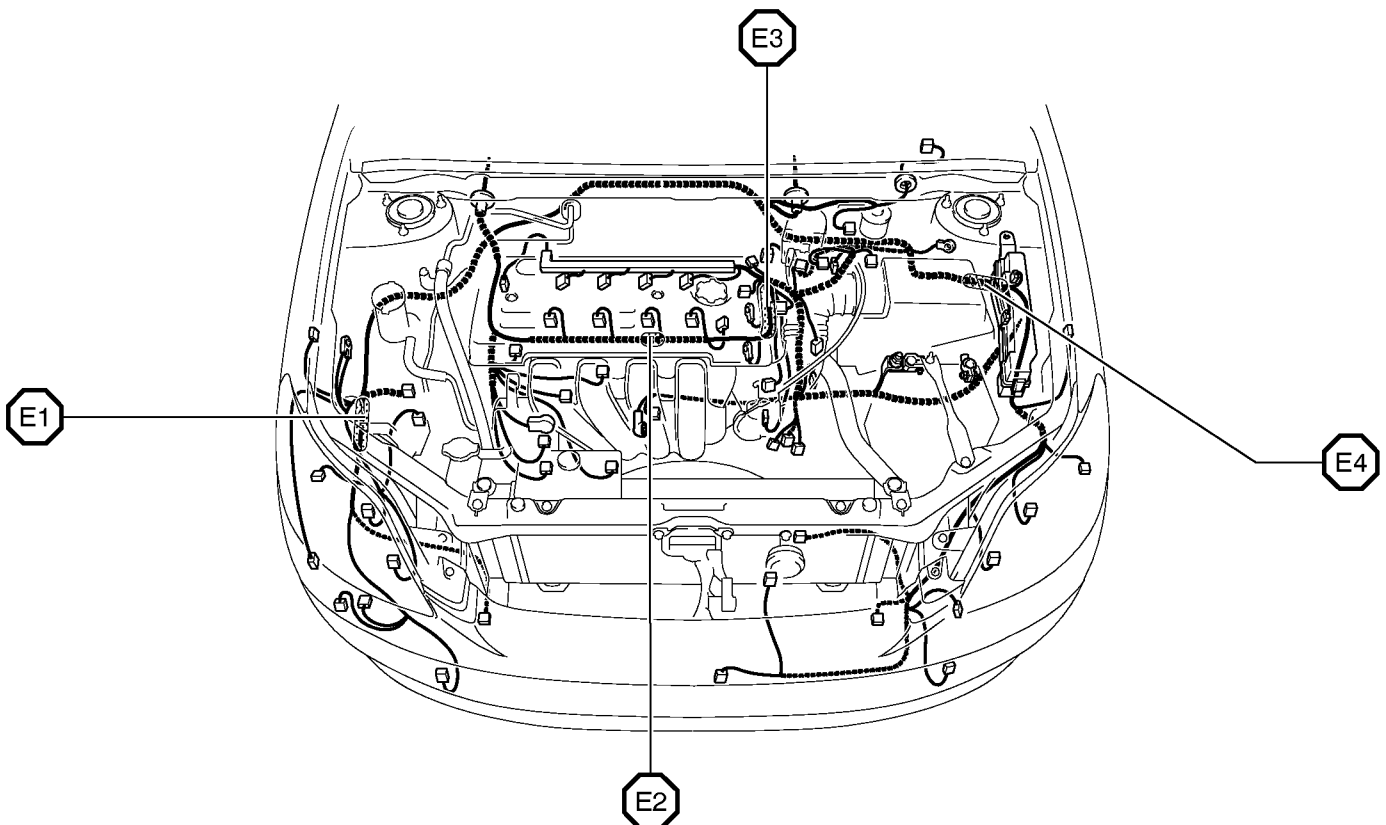


Connector Joining Wire Harness and Wire Harness

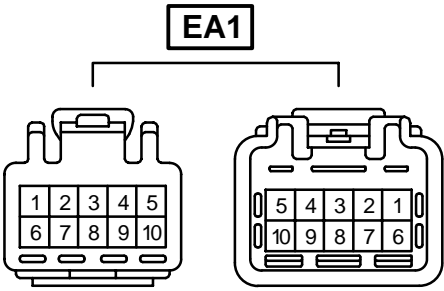


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

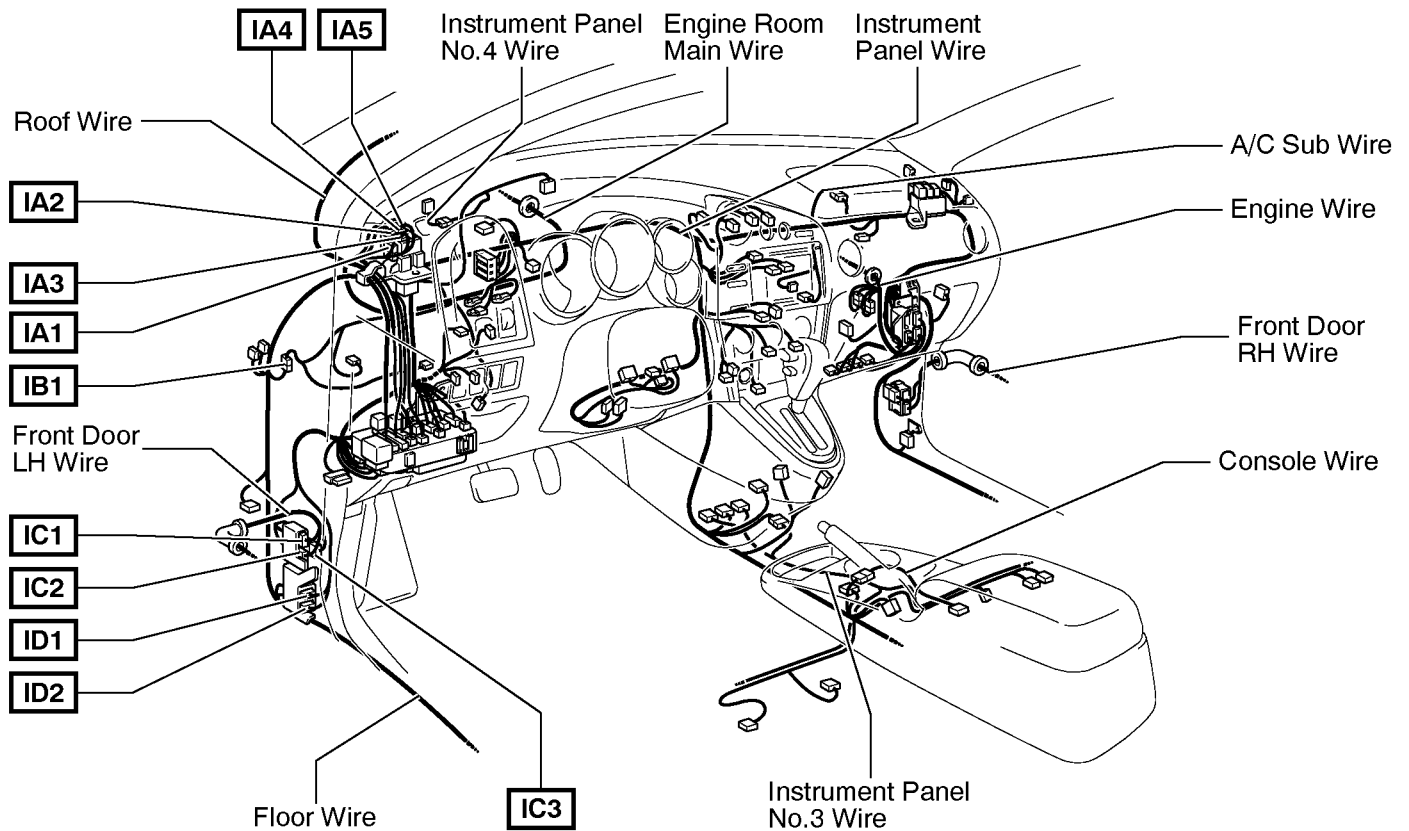

▽ : Location of Ground Points

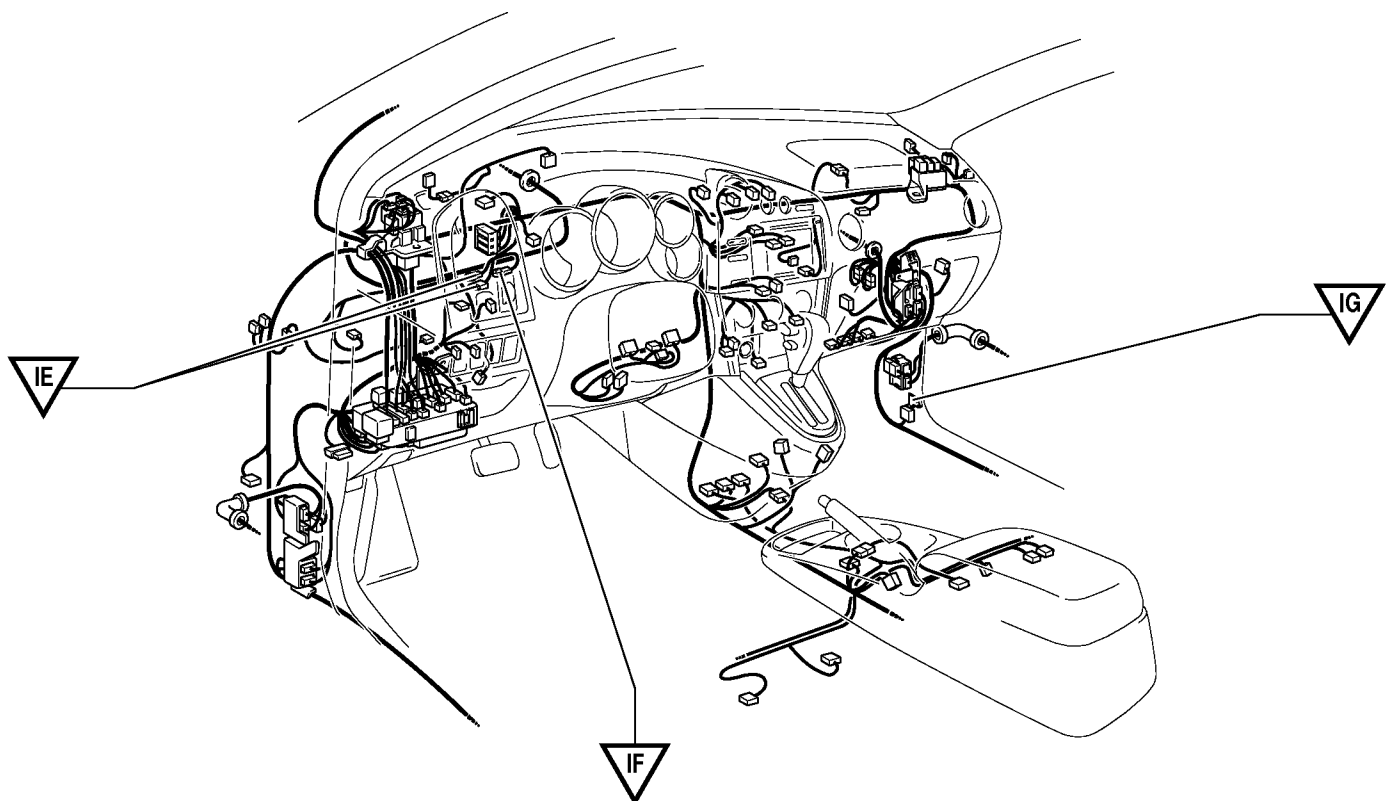


Connector Joining Wire Harness and Wire Harness

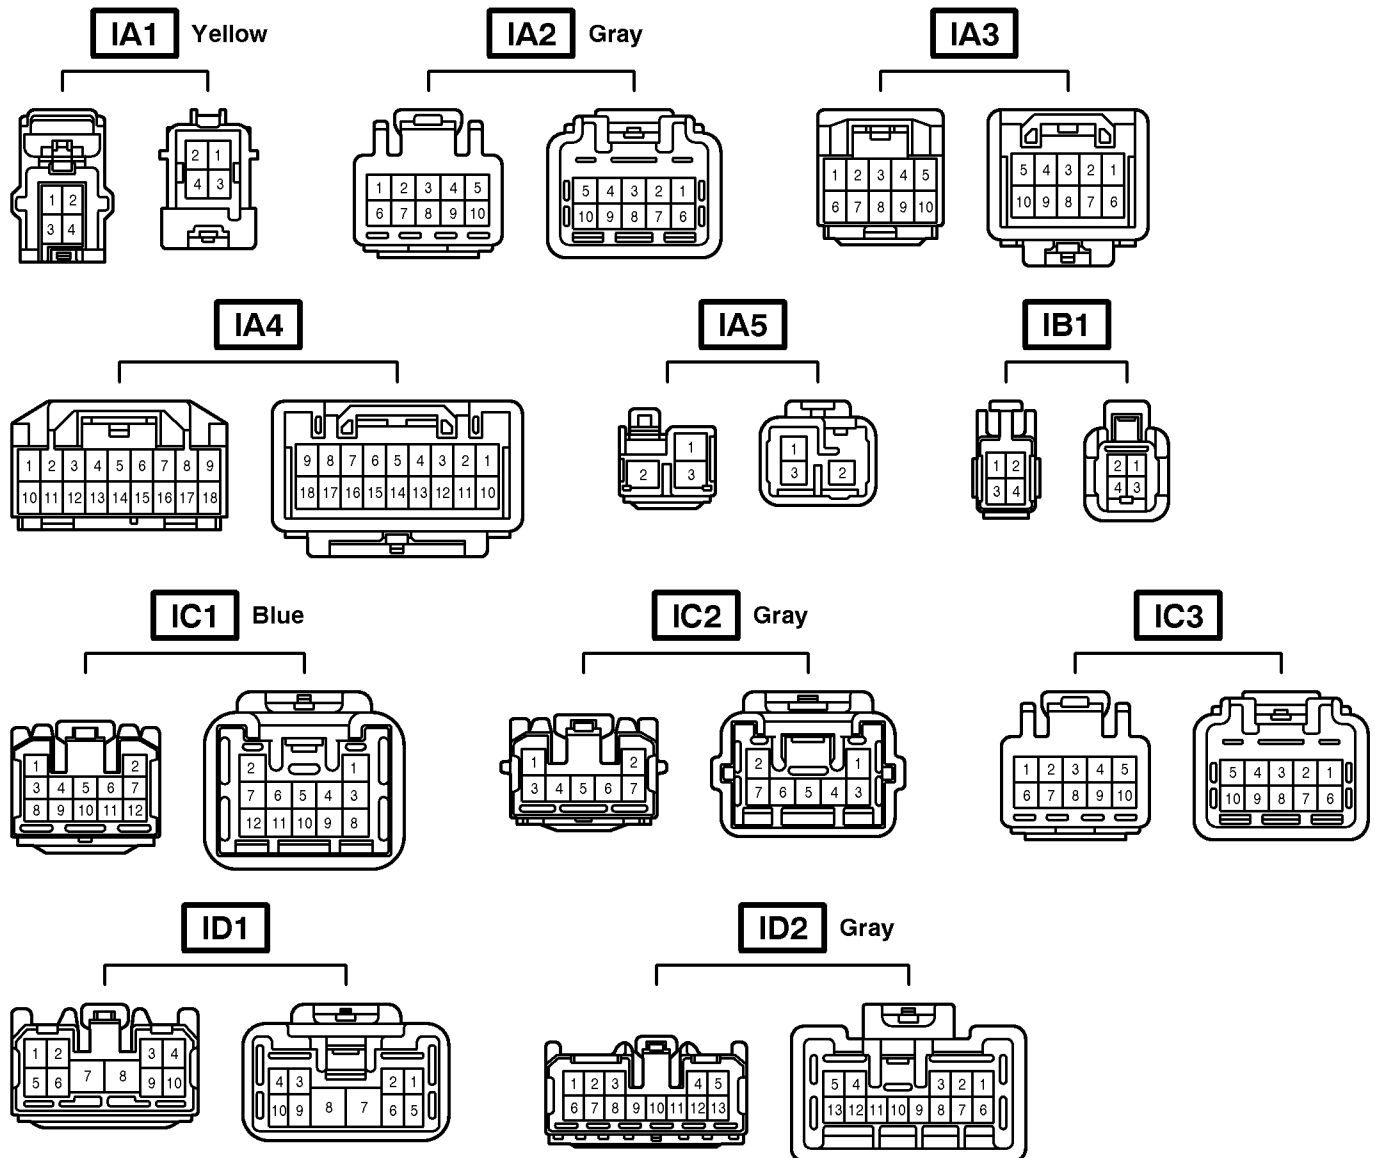


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IA2	
IA3	
IA4	
IA5	
IB1	Engine Room Main Wire and Floor Wire (Cowl Side Panel LH)
IC1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	
IC3	
ID1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

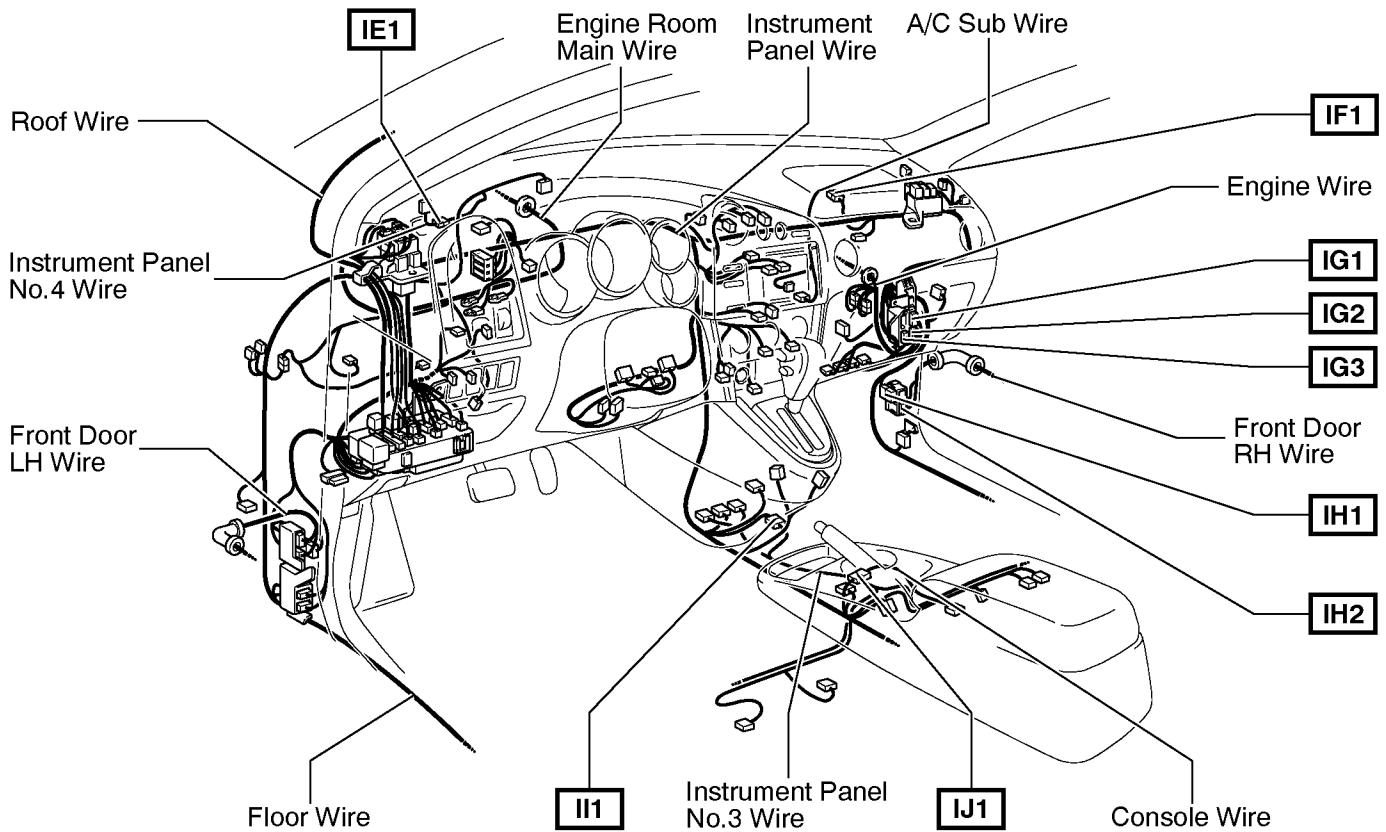

○ : Location of Splice Points

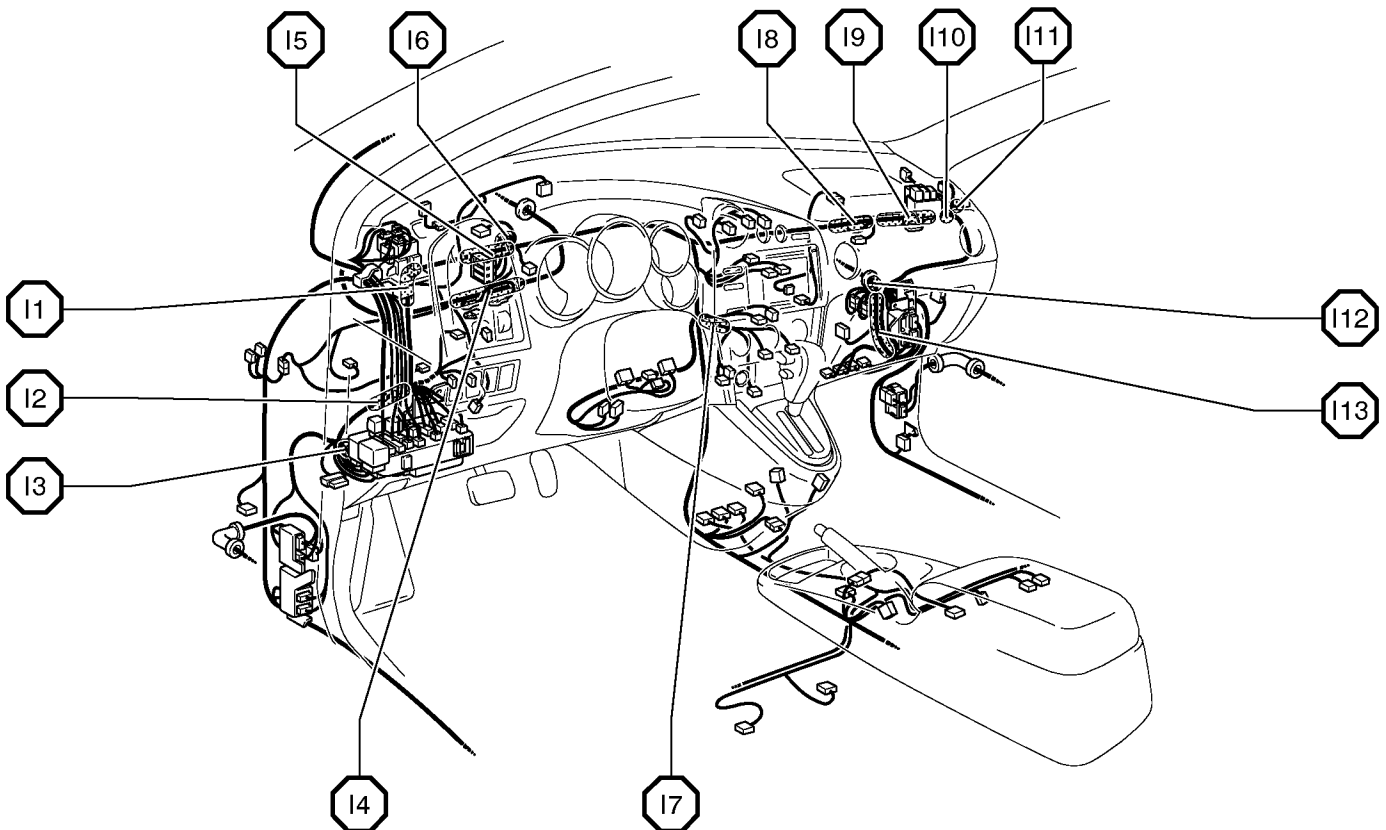

Connector Joining Wire Harness and Wire Harness

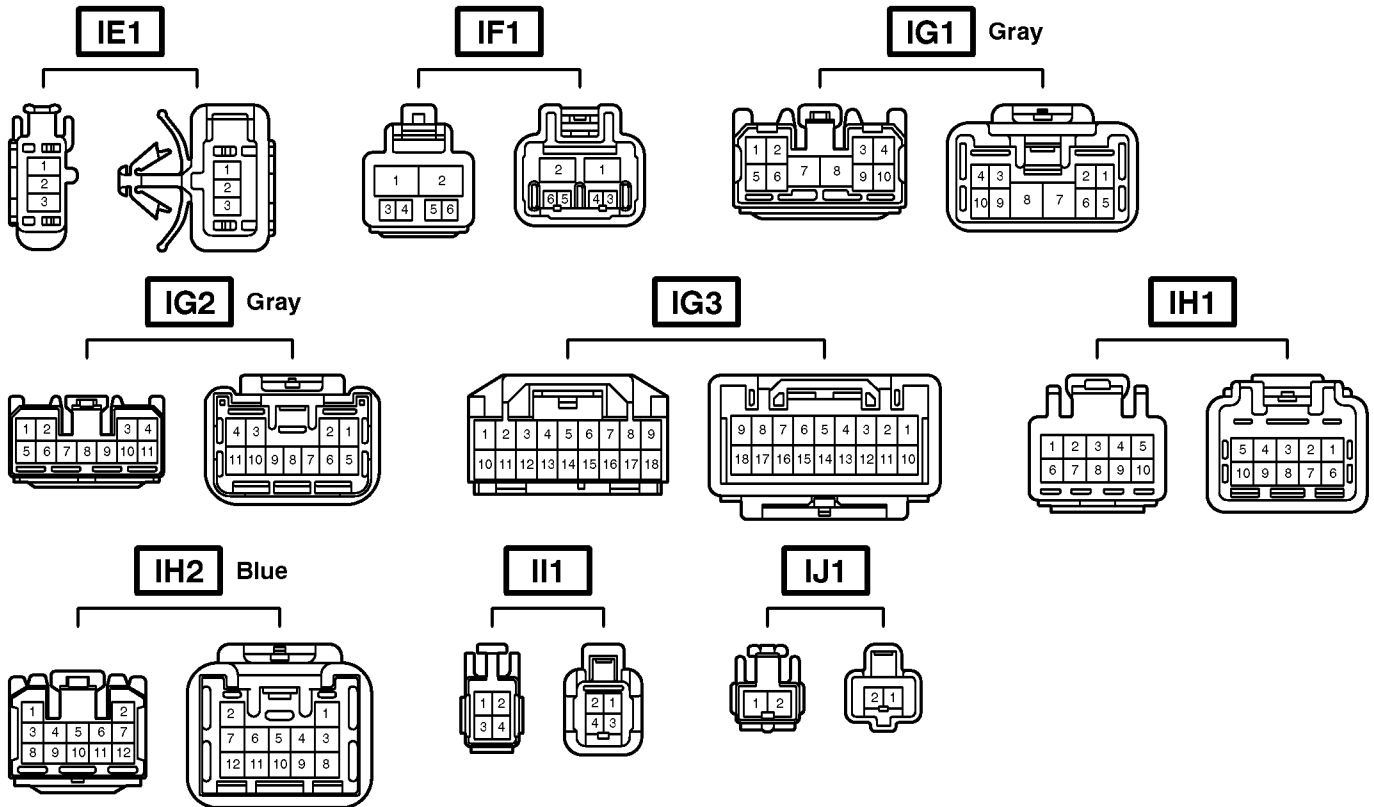


Code	Joining Wire Harness and Wire Harness (Connector Location)
IE1	Instrument Panel Wire and Instrument Panel No.4 Wire (Behind the Combination Meter)
IF1	Instrument Panel Wire and A/C Sub Wire (Left Upper Side of the Blower Unit)
IG1	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IG2	
IG3	
IH1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2	
II1	Instrument Panel Wire and Instrument Panel No.3 Wire (Under the Instrument Panel Center)
IJ1	Console Wire and Instrument Panel Wire (Front Side of the Parking Brake Lever)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

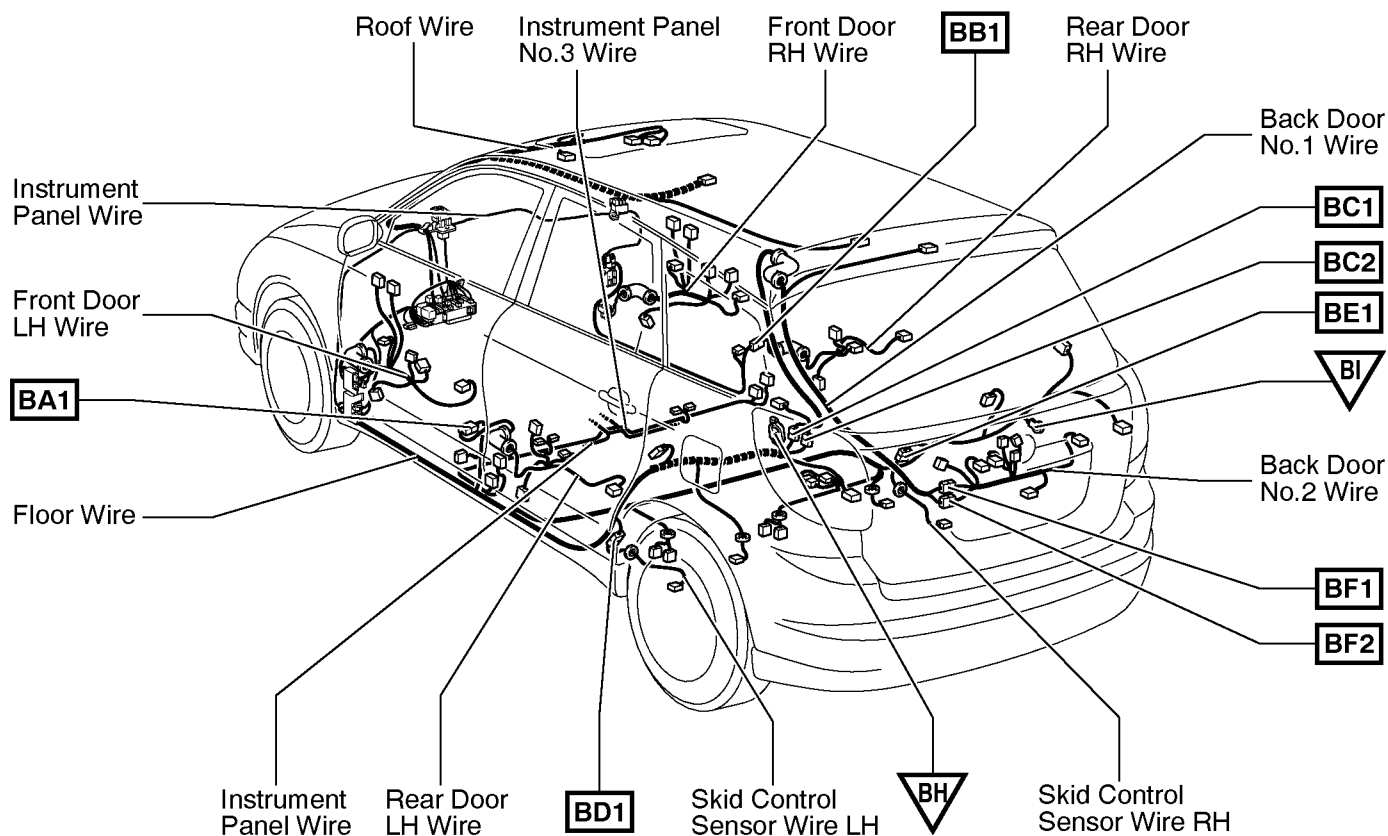

○ : Location of Splice Points

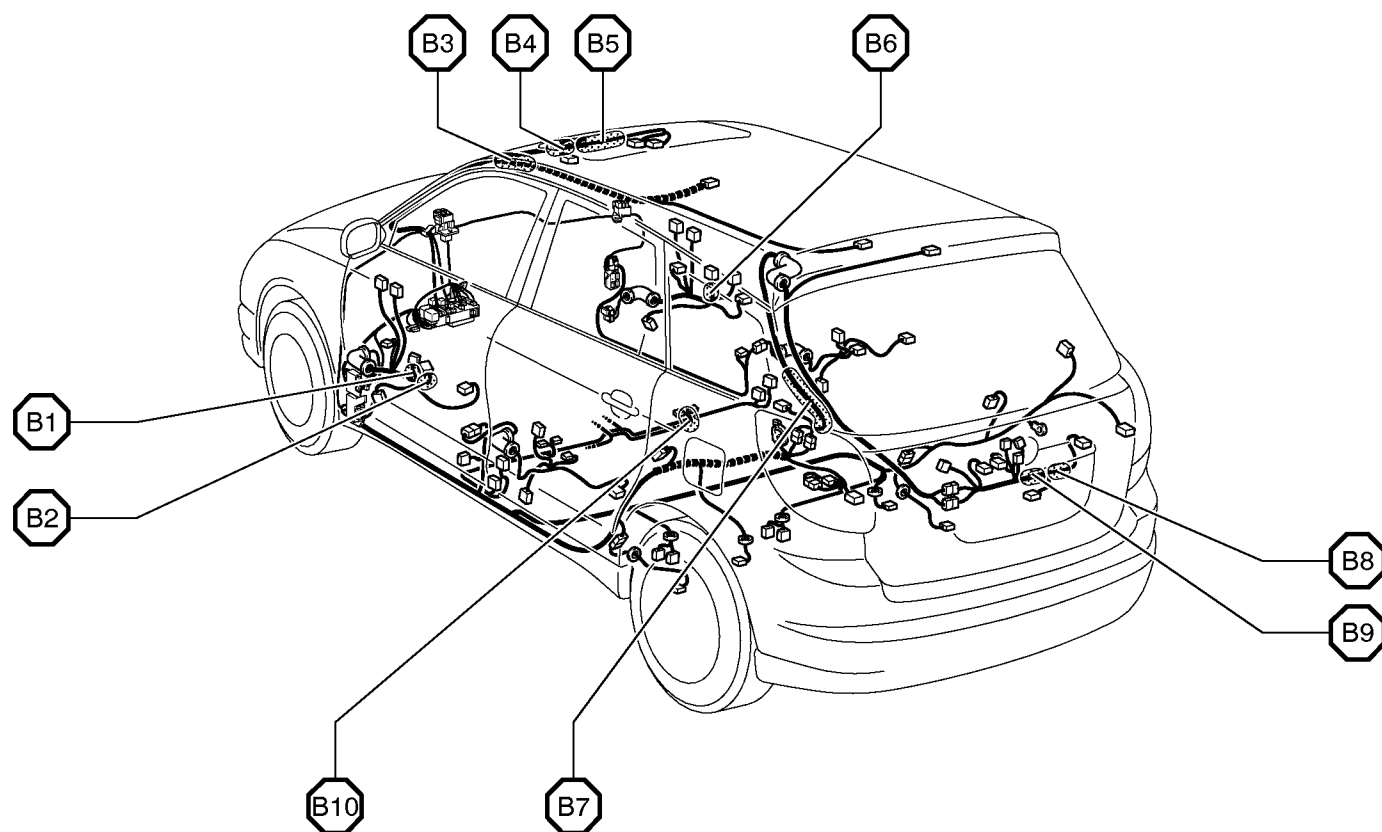

Connector Joining Wire Harness and Wire Harness

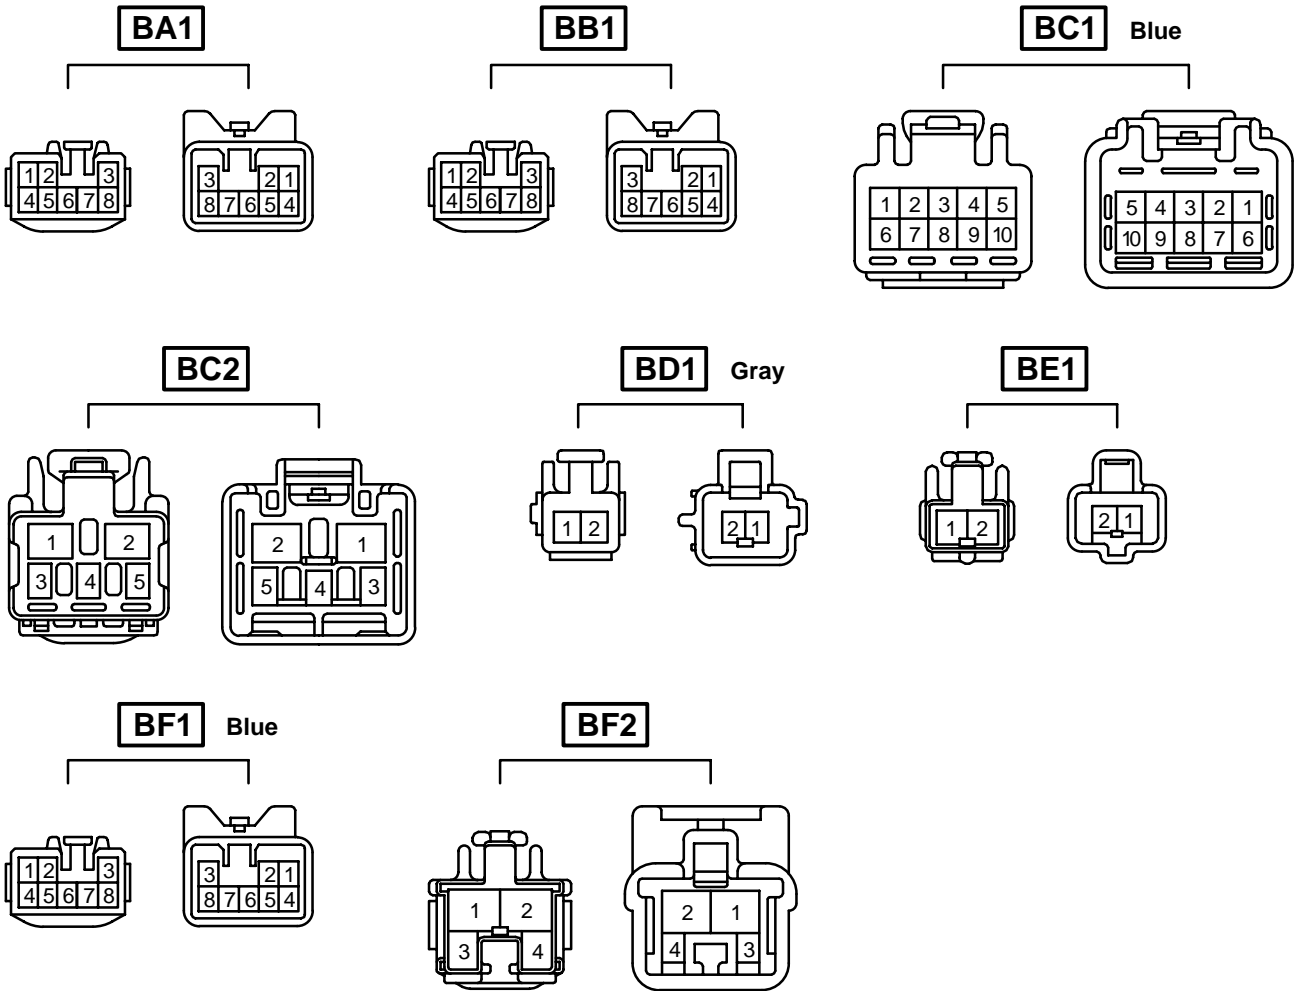

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	Rear Door RH Wire and Instrument Panel Wire (Right Center Pillar)
BC1	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BC2	
BD1	Skid Control Sensor Wire LH and Floor Wire (Quarter Wheel House LH)
BE1	Skid Control Sensor Wire RH and Floor Wire (Quarter Wheel House RH)
BF1	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2	