



Navigation System, Radio and Player

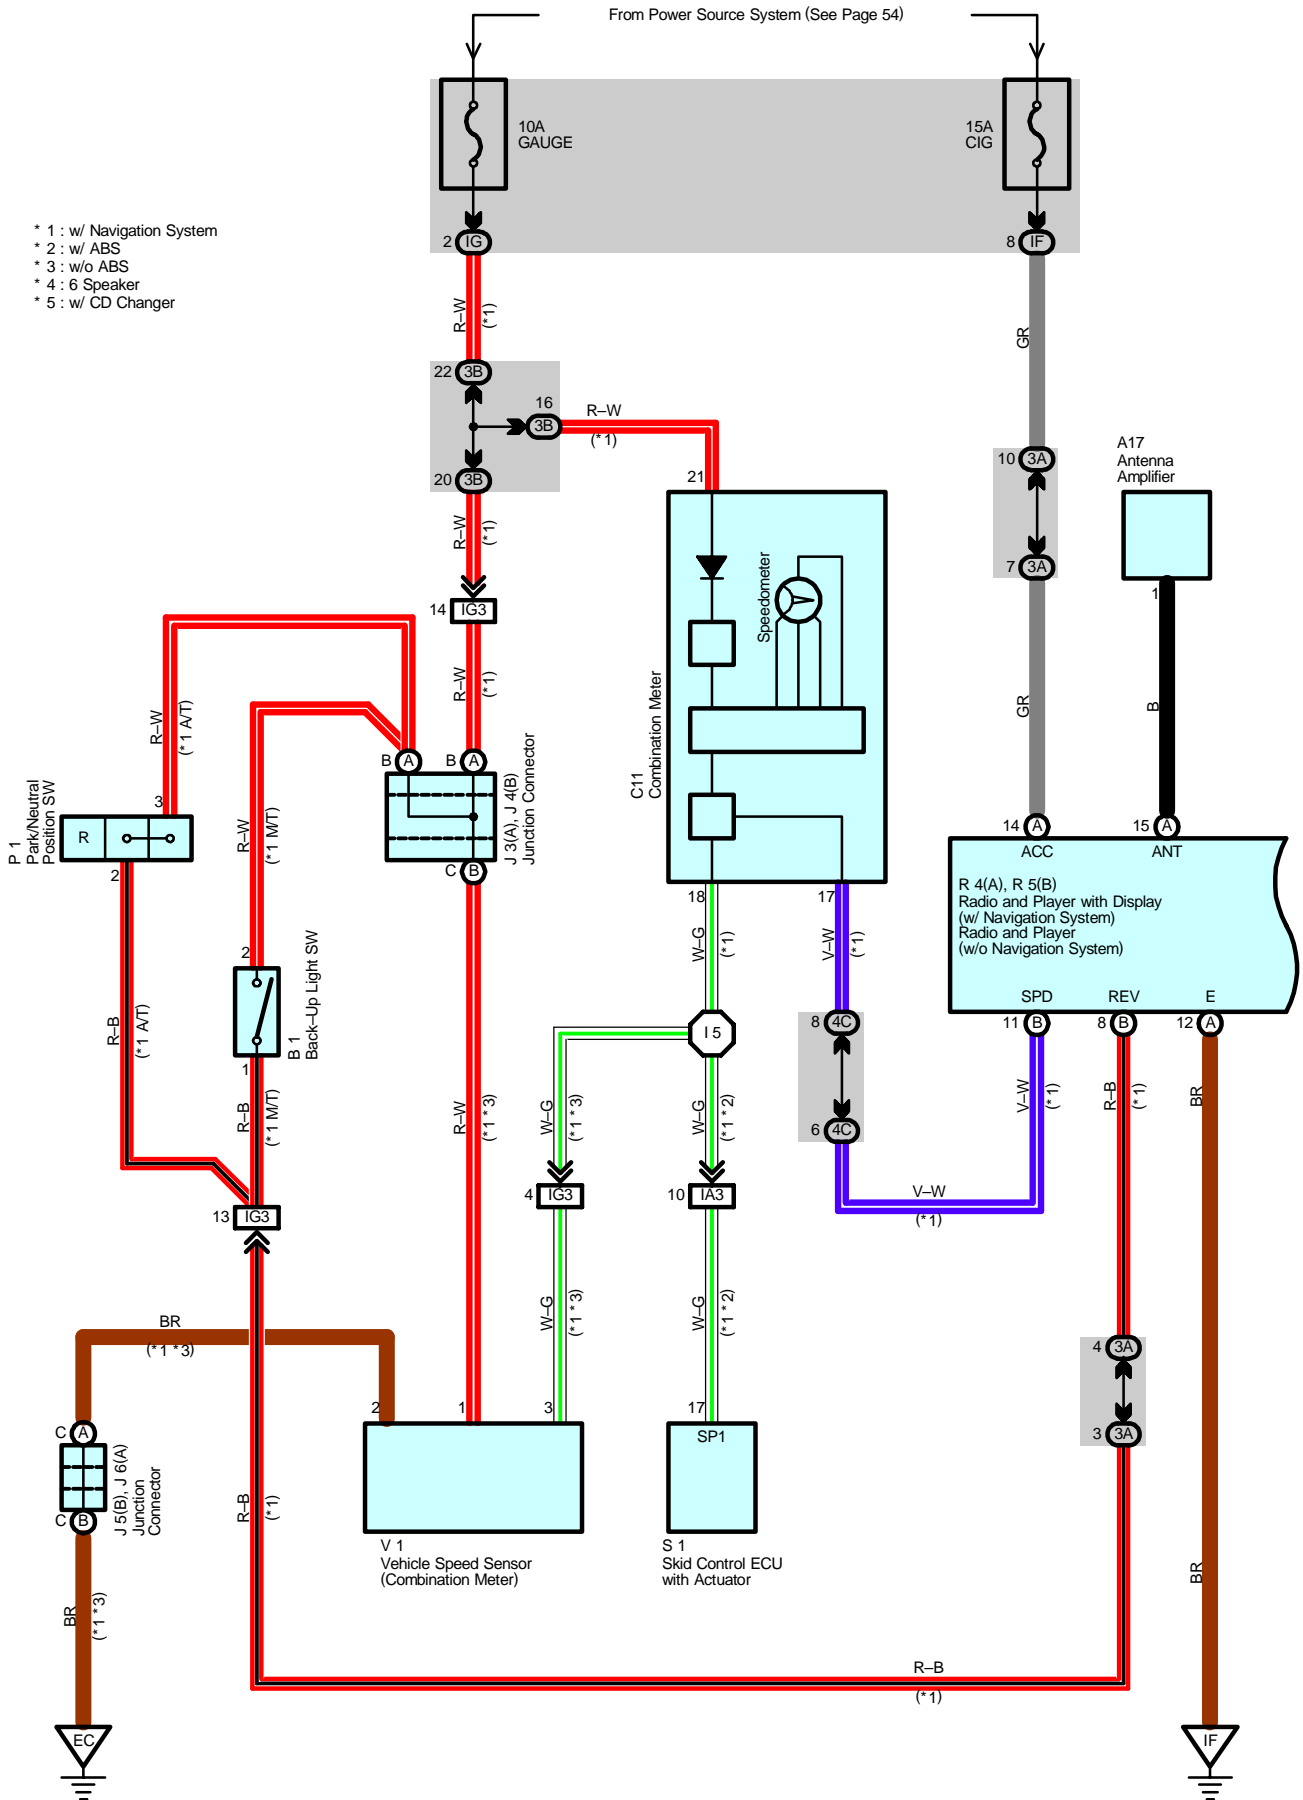

From Power Source System (See Page 54)

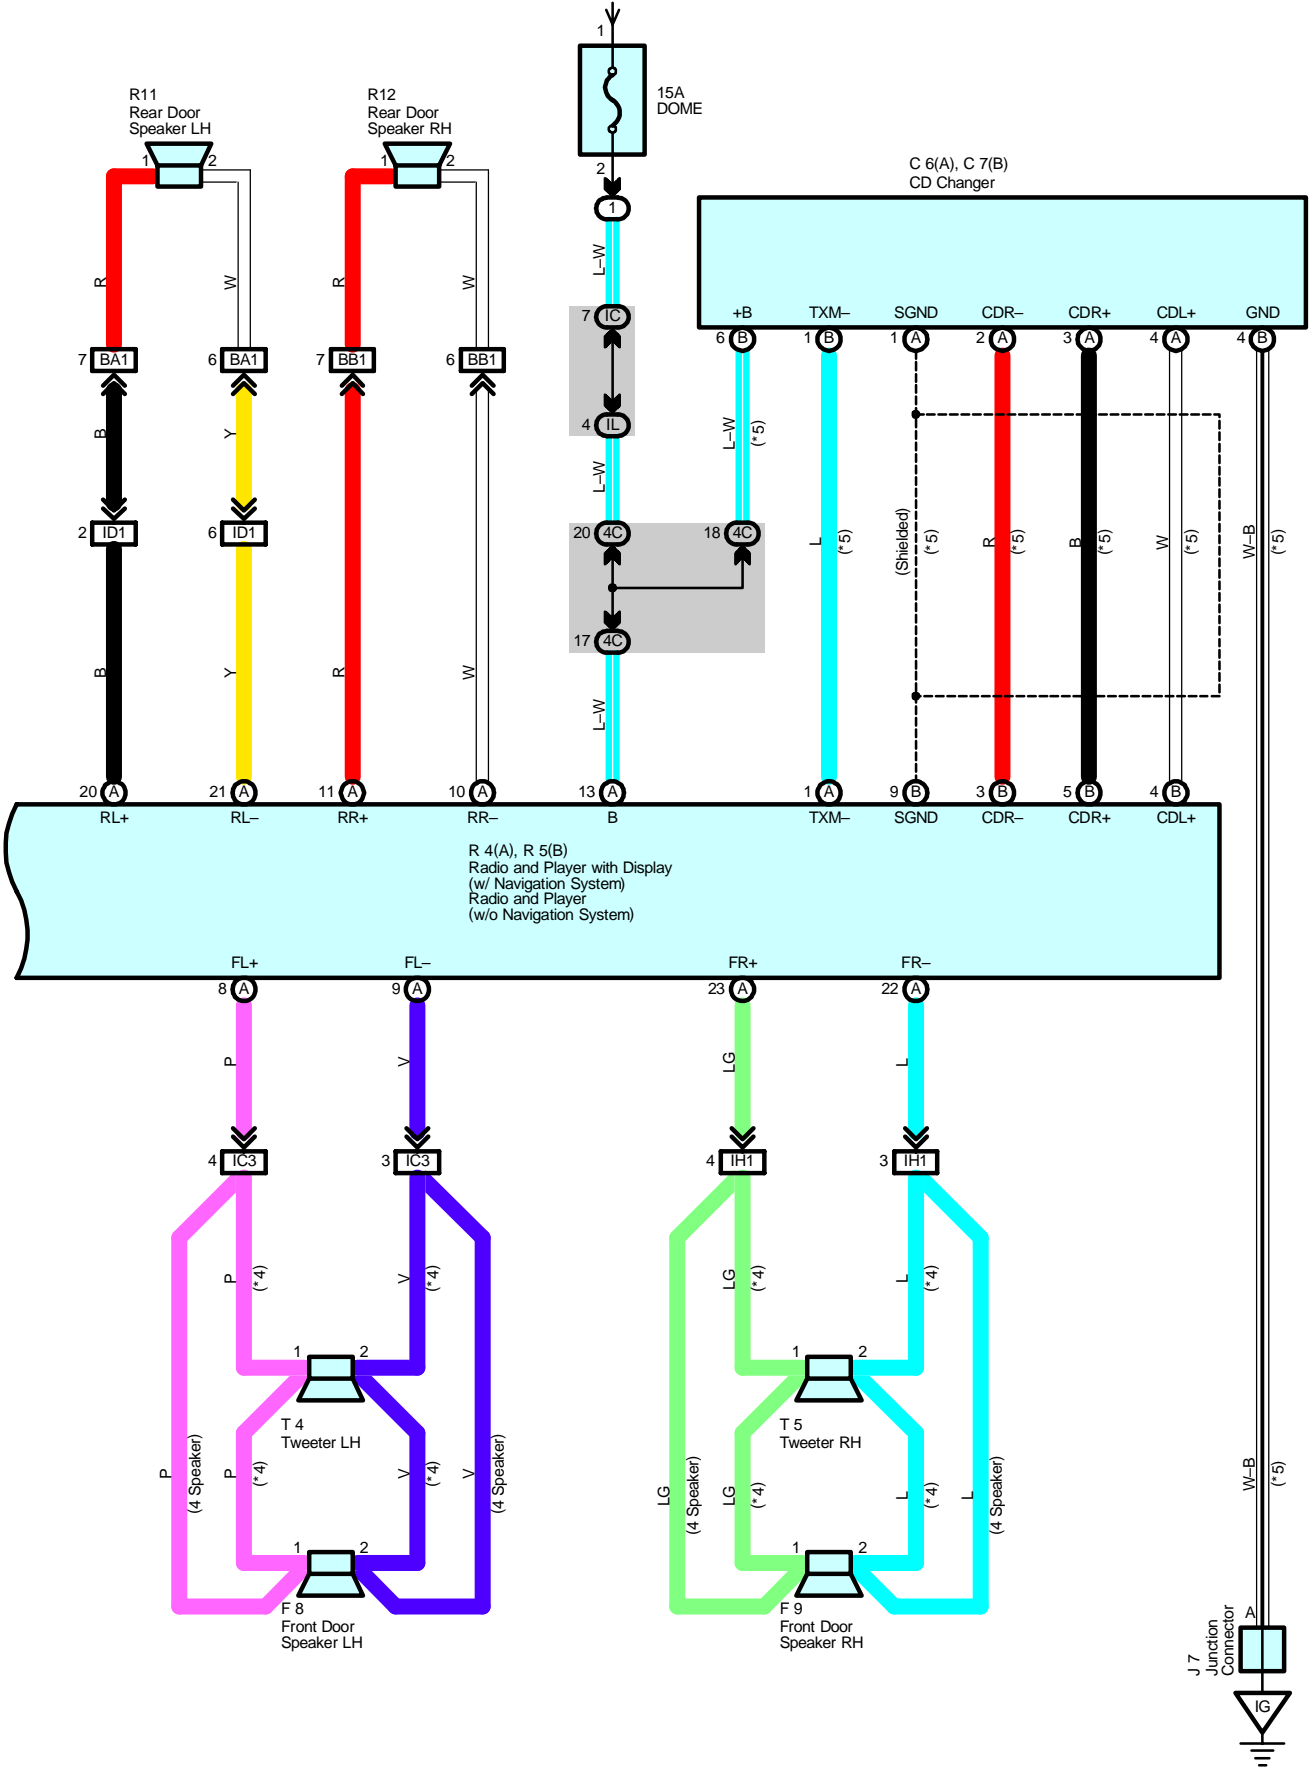

Navigation System, Radio and Player

Service Hints

R4 (A) Radio and Player with Display (w/ Navigation System) Radio and Player (w/o Navigation System)

(A)13–Ground : Always approx. 12 volts

(A)14–Ground : Approx. 12 volts with the ignition SW at ACC or ON position

(A)12–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	38	J3	A 39	R5	B 39
B1	34 (2ZZ–GE)	J4	B 39	R11	41
	36 (1ZZ–FE)	J5	B 39	R12	41
C6	A 38	J6	A 39	S1	35 (2ZZ–GE)
C7	B 38	J7	39		37 (1ZZ–FE)
C11	38	P1	35 (2ZZ–GE)	T4	41
F8	40		37 (1ZZ–FE)	T5	41
F9	40	R4	A 39	V1	37 (1ZZ–FE)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	23	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IL	24	
3A	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)
3B		
4C	32	Instrument Panel Wire and Center J/B (Behind the Combination Meter)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	46	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IC3	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	46	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG3	48	Engine Wire and Instrument Panel Wire (Blower Unit RH)
IH1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	50	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	50	Rear Door RH Wire and Instrument Panel Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
EC	44 (1ZZ–FE)	Left Side of the Cylinder Head
IF	46	Behind Combination Meter
IG	46	Right Kick Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	48	Instrument Panel Wire			